

### Manufacturer & Contact

SEH Computertechnik GmbH Suedring 11 33647 Bielefeld

Germany

Phone: +49 (0)521 94226-29 Fax: +49 (0)521 94226-99 Support: +49 (0)521 94226-44

Email: info@seh.de

Web: https://www.seh-technology.com



### **Document**

Type: User Manual

Title: INU User Manual Windows

Version: 1.3 | 2022-12

## **Legal Information**

SEH Computertechnik GmbH has endeavored to ensure that the information in this documentation is correct. If you detect any inaccuracies please inform us at the address indicated above. SEH Computertechnik GmbH will not accept any liability for any error or omission. The information in this manual is subject to change without notification.

The original manual is the German version of this document and shall govern. All non-German versions of this document are translation of the original manual.

All rights are reserved. Copying, other reproduction, or translation without the prior written consent from SEH Computertechnik GmbH is prohibited.

© 2022 SEH Computertechnik GmbH

All trademarks, registered trademarks, logos and product names are property of their respective owners.

## **INU User Manual Windows**

# Inhalt

1	General Information	1
1.1	Product	2
1.2	Documentation	5
1.3	Support and Service	7
1.4	Your Safety	
1.5	First Steps	9
2	Administration Methods	10
2.1	Administration via INU Control Center	11
2.2	Administration via the SEH UTN Manager	13
2.3	Administration via the SEH Product Manager	
2.4	Administration via Email	20
3	Working with the SEH UTN Manager	22
3.1	How to Find INU Servers/USB Devices in the Network	23
3.2	How to Establish a Connection to a USB Device	25
3.3	How to End the Connection between the USB Device and the Client	27
3.4	How to Request an Occupied USB Device	
3.5	How to Automate USB Device Connections and Program Starts Starts	
3.6	How to Find Status Information on USB Ports and USB Devices	
3.7	How to Use the Selection List and Manage User Access Rights with It	
3.8	How to Use the SEH UTN Manager without Graphical User Interface (utnm)	37
4	Network Settings	42
1.1	How to Configure IPv4 Parameters	43
1.2	How to Configure IPv6 Parameters	
1.3	How to Use the INU Server in VLAN Environments	
1.4	How to Configure the DNS	
1.5	How to Configure Email (POP3 and SMTP)	
1.6	How to Configure Bonjour	
1.7	How to Configure Server Services	53
5	Device Settings	55
5.1	How to Assign a Description	
5.2	How to Configure the Device Time	
5.3	How to Configure the (Encrypted) UTN Port	
5.4	How to Write a Description for a USB port	
5.5	How to Get Messages	
5.6	How to Monitor the INU Server	
5.7	How to Use the Relay	66
5	Security	68
5.1	How to Define the Encryption Strength for SSL/TLS Connections	
5.2	How to Encrypt the Connection to the INU Control Center	71
5.3	How to Protect Access to the INU Control Center	
	(User Accounts)72	
5.4	How to Configure SNMP	
5.5	How to Block INU Server Ports (TCP Port Access Control)	74

## **INU User Manual Windows**

6.6	How to Use Certificates	75
6.7	How to Configure Network Authentication (IEEE 802.1X)	80
6.8	How to Assign a Name to a USB Port	83
6.9	How to Control Access to USB Devices	84
6.10	How to hide protected USB devices in the SEH UTN Manager selection list?	
6.11	How to Block USB Device Types	
6.12	How to Disable a USB Port	89
6.13	How to Encrypt the USB Connection	90
7 N	Maintance	91
7.1	How to Backup Your Configuration	92
7.2	How to Reset Parameters to their Default Values	
7.3	How to Perform a Device Software Update	97
7.4	How to Restart the INU Server	98
8 A	Appendix	99
8.1	Glossary	100
8.2	Troubleshooting	101
8.3	Parameter lists	103
8.4	SEH UTN Manager – Feature Overview	124
8 5	Index	

# 1 General Information

- Your Safety ⇒ 🖺8
- First Steps ⇒ 🖺 9

### 1.1 Product

### **Purpose**

INU servers integrate non-network-ready USB devices (e.g. USB sensors, USB cameras, etc.) into an industrial environment via TCP/IP network. For this purpose, the USB devices will be connected to the USB ports of the INU server. Then the UTN (UTN = USB to Network) functionality and the corresponding software tool 'SEH UTN Manager' establish a virtual USB connection between USB device and client. The USB device can be used as if it were connected locally.

In addition, a load can be connected to and then used via the relay of the INU server. By default, predefined events and errors switch the relay. For example, an active connection to a USB device can be visualized by a lamp or the loss of a power supply by an acoustic alarm signal. Alternatively, the relay can be switched manually or via SNMP. Thus diverse, individually adapted relay scenarios can be set up in your environment.

### **System Requirements**

The INU server has been designed for use in TCP/IP networks.

The SEH UTN Manager can be used in the following systems:

- For Windows 10 or later, Windows Server 2012 or later
- For macOS with SEH UTN Manager Version 3.3.x
  - 10.15 (Catalina)
  - 11 (Bia Sur)<sup>1</sup>
- For macOS with SEH UTN Manager Version 3.4.x
  - 12 (Monterey)<sup>2</sup>
- For Linux (Ubuntu 18.04/20.0.4, Debian 9/10/11, CentOS 7/8, CentOS Stream 8, Oracle 7/8, RHEL 7.4/8.4, Open-SUSE Leap 15.3, SUSE Linux Enterprise Server 15) <sup>3</sup>
- IPv4 TCP/IP network
- IPv6 TCP/IP network

The SEH Product Manager can be used under the following systems:

- Microsoft Windows (32/64-Bit; Windows 10, Windows 11, Server 2012 R2, 2016, 2019, 2022)
- macOS 10.15 (Catalina), macOS 11 (Big Sur), macOS 12 (Monterey)
- IPv4 TCP/IP network
- IPv6 TCP/IP network

<sup>1.</sup> macOS 11.x (Big Sur) only limited USB device support.

<sup>2.</sup> Installer supports only "complete version". More details can be found in chapter 'Administration via the SEH UTN Manager' ⇒ ■13.

<sup>3.</sup> A successful installation cannot be guaranteed due to the variety of Linux systems! The installation must be carried out under your own responsibility.



### Important:

The support of isochronous USB devices (e.g. cameras, microphones, speakers, etc.) depends on

- the operating system:
  - Windows
  - macOS
  - Linux
- the software version:
  - firmware/software for INU servers: 20.1.16 or later
  - SEH UTN Manager: 3.3.5 or later

This document describes the usage in Windows environments. Information about the usage in other environments can be found in the relevant system-specific User Manual. More details can be found in chapter 'Documentation'  $\Rightarrow \triangleq 5$ .

### **Combination with Associated Products**

You can combine the INU server with additional SEH Computertechnik GmbH products to ideally adapt the use of your devices to your environment!

### Industrial Solution 'IH-304 USB Hub'

The industrial solution IH-304 is a USB hub with four USB 3.0 ports. If it is connected to the INU server, up to four USB devices can be used per INU server USB port. This is a most efficient solution for control cabinets with little space.

The IH-304 must be purchased separately. Detailed information:

https://www.seh-technology.com/products/industrial-solutions/ih-304.html



### Industrial Solution 'SU-302 Serial to USB Converter

The industrial solution SU-302 is a serial to USB converter. It can be connected to the INU server via USB and allows for the use of two serial devices via its interfaces RS-232 (for plug type D-Sub, DE-9) and RS-485 (also known as EIA-485; compatible with RS-422/EIA-422).

By combining the INU server and SU-302 you make your serial devices available via network (TCP/IP, Internet)!

https://www.seh-technology.com/products/industrial-solutions/su-302.html



### Industrial Solutions 'Top-Hat Rail Power Supplies'

All Industrial Solutions are mounted on a top-hat rail in a control cabinet. The USB Deviceserver INU-100 and the USB Hub IH-304 are to be connected to a power supply. You either use your existing power supply or—if there is none or no vacancy—you can buy a new one.

Spare yourself the search and use the top-hat rail power supplies DRP-20 and DRP-75 which are specifically selected to perfectly match the industrial solutions!

https://www.seh-technology.com/products/industrial-solutions/accessories.html



## 1.2 Documentation



Please load all current documents from our Website: <a href="https://www.seh-technology.com">https://www.seh-technology.com</a>

## **Further applicable documents**

Thee INU documentation consists of the following documents:

Hardware Installation Guide	Print, PDF	Information on safety, technical data, hardware installation and declarations of conformity
Quick Installation Guide	Print, PDF	Description of initial setup
User Manual	PDF	Detailed description of the INU server configuration, administration and maintenance. System-specific instructions for the following systems: - Windows - macOS - Linux
Online help	HTML	Information on how to use the web interface 'INU Control Center'.
		(Embedded into web interface; no download.)
Product information	print, PDF	Features and technical data
Brochures	print, PDF	
Open Source Licenses	online	https://www.seh-technology.com/services/licenses.html

### Symbols and Legend

A variety of symbols and mark-ups are used within this document.



### **WARNING**

Warning A warning contains important information that must be heeded. Non-

observance may lead to malfunctions.



### **Important:**

Important information These notes contain crucial information for failure-free operation.

✓ Requirement Requirements that must be met before you can begin the action.

Numeration Listing

1. Numeration Step-by-step instructions

→ Result Outcome of a performed action

Recommendations and beneficial advice

⇒ 

Reference (Within the document you can use hyperlinks.)

**Bold** Established terms (e.g. of buttons, menu items, or selection lists)

Courier Code (e.g. for command lines or scripts), Paths 'Proper names' Single quotation marks identify proper names

## 1.3 Support and Service

SEH Computertechnik GmbH offers extensive Support. If you have any questions, please contact us.



Monday through Thursday
Friday

8:00 a.m. to 4:45 p.m. 8:00 a.m. to 15:15 p.m.



+49 (0)521 94226-44



support@seh.de

Customers from the United States of America (USA) and Canada please contact North American Support:



Monday – Friday

9:00 am - 5:00 pm (EST/EDT)



+1-610-933-2088



support@sehtechnology.com

All information and downloads regarding your product are available on our website:



https://www.seh-technology.com



## 1.4 Your Safety

Read and observe all safety regulations and warnings found in the documentation, on the device and on the packaging. This will avoid potential misuse and prevent damages to people and devices.

### **Intended Use**

The INU server is used in TCP/IP networks and has been designed for use in industrial environments. It allows network users to access non-network-ready USB devices. In addition, a load can be connected to and then used via the relay of the INU server.

### **Improper Use**

All uses of the device that do not comply with the functionalities described in the INU documentation are regarded as improper uses.

### **Safety Regulations**

Before starting the initial setup of the INU server, read and observe the safety regulations in the 'Hardware Installation Guide'. This document is enclosed in the packaging in printed form.

### Warnings

Read and observe all warnings mentioned in this document. Warnings are found before any instructions known to be dangerous. They are presented as follows:



## **WARNING** Warning!

### **Liability and Guarantee**

SEH Computertechnik GmbH will not accept any liability for personal injuries, property damages and consequential damages resulting from the non-observance of the mentioned safety regulations and warnings. Non-observance will also result in any guarantee claims becoming void.

### **Modifications to the Device and Repairs**

It is not allowed to make modifications to the hardware and software or to try to repair the device. If your device needs to be repaired, contact our support  $\Rightarrow \blacksquare 7$ .

## 1.5 First Steps

- 1. Read and observe the security regulations in order to avoid damages to people and devices ⇒ 🖺 8.
- 2. Install the hardware. The hardware installation includes connecting the INU server to the network, USB devices, and power grid  $\Rightarrow \Box$  'Hardware Installation Guide'.
- 3. Install the software. The software installation includes installing the required software tool 'SEH UTN Manager' on your client and assigning an IP address ⇒ □ 'Software Installation Guide'.
- 4. Configure the INU server so that it is optimally embedded it into your network and sufficiently protected. All information on how to do this you will find in this document.
- 5. Use the SEH UTN Manager to establish and manage connections to the USB devices which are connected to the INU server.



You can find information on the INU documentation in chapter Documentation  $\Rightarrow$ 

## **2 Administration Methods**

You can administer, configure and maintain the INU server in a number of ways:

- Administration via INU Control Center 

  □ 11
- Administration via the SEH UTN Manager 

  □ □ 13
- Administration via the SEH Product Manager ⇒ 18
- Administration via Email ⇒ 120

### 2.1 Administration via INU Control Center

The INU server has a user interface, the INU Control Center which can be opened in an Internet browser (e.g. Microsoft Edge).

The INU server can be configured, monitored and maintained via the INU Control Center.

### **Open INU Control Center in Browser**

- ✓ The INU server is connected to the network and the power grid.
- 1. Open your browser.
- 2. Enter the IP address of the INU server as the URL.
- → The INU Control Center is displayed in the browser.



### Important:

If the INU Control Center is not displayed, check if a gateway is configured ( $\Rightarrow$   $\blacksquare$ 43) and the proxy settings of your browser.

### **INU Open Control Center via SEH UTN Manager**

- ✓ The INU server is connected to the network and the power grid.
- ✓ The INU server has a valid IP address ⇒ 143.
- ✓ The SEH UTN Manager is installed on the client  $\Rightarrow$  13.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the INU server.
- 3. In the menu bar, select **UTN Server–Configure**.
- → Your browser opens and the INU Control Center is displayed.

### **Opening INU Control Center from SEH Product Manager**

The INU is displayed directly in the SEH Product Manager. You can also open it separately in the browser.

- ✓ The SEH Product Manager is installed on the client 

  □ 18.
- 1. Start the SEH Product Manager.
- 2. In the device list, select the SEH INU server.
  The INU is displayed on the right side in the integrated browser.
- 3. To access the INU separately in the browser, select **Launch Browser** from the **Device** menu.
- → Your browser opens and the INU is displayed...



### Important:

If the INU is not displayed, check the certificate.

If the certificate chain of trust can not be verified, a security warning will appear instead of the INU. Review the certificate personally and add an exception rule for the certificate, if necessary. Detailed information can be found in the

⇒ 🛄 'SEH Product Manager Online Help'.

Table 2.1-1: Controls

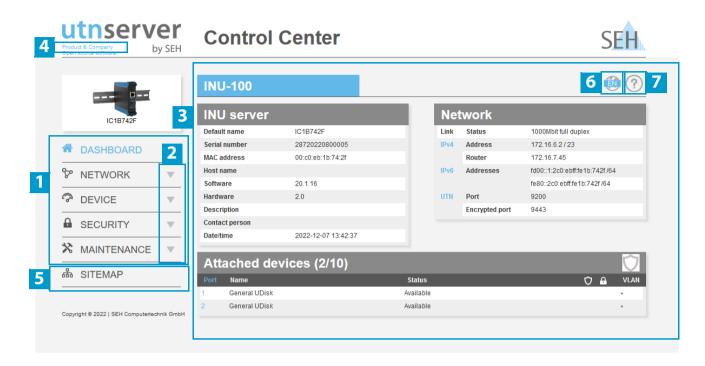


Figure 2.1-1: INU Control Center

1	Menu item	After selecting a menu item (simple mouse click), the available submenu items are displayed to the left.
2	Submenu items	After selecting a submenu item, the corresponding page with its content is displayed.
3	Page	Menu content
4	Product & Company	Manufacturer's contact details and additional product information.
5	Sitemap	Overview of and direct access to all pages of the INU Control Center.
6	Flags	Language selection
7	? icon	Online help

## 2.2 Administration via the SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH. The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the INU servers.

### **Features**

The software is installed on all clients that are meant to access a USB device in the network. After the SEH UTN Manager is started, the network is scanned for connected INU servers. All INU servers found and their connected USB devices are displayed in the 'network list'. To use the USB devices connected to the INU server, you have to add the INU server to the 'selection list'. The devices shown in the selection list can be administrated and the connected USB devices can be used. Working working with the SEH UTN Manager is described in detail in the chapter 'Working with the SEH UTN Manager'  $\Rightarrow$  22.



### **Important:**

The SEH UTN Manager can be used in IPv4 and IPv6 environments. The selection determines which IP version is used in the software.

"IPv4" is default. Selecting "IPv6" is only suitable for IPv6 networks. If you are not sure about your network, select "IPv4 and IPv6".

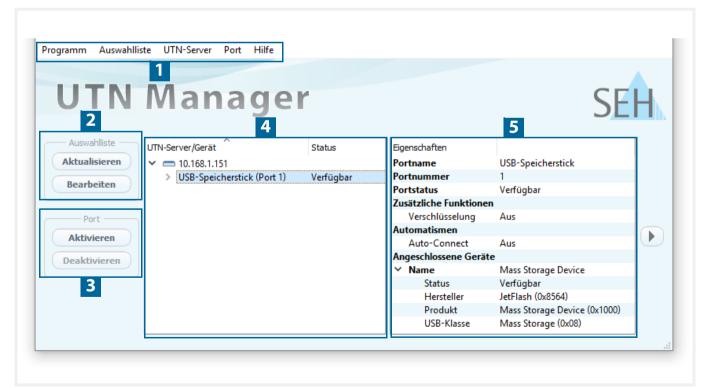


Figure 2.2-2: SEH UTN Manager

1	Menu bar	Available menu items
2	Buttons for editing the selection list	Opens the dialog for searching INU servers in the network and for selecting the desired devices $\Rightarrow$ $23$ .
3	Buttons for managing the port connection	Establishes a connection to the USB device connected to the USB port (□⇒   25) or interrupts the connection (□⇒ 27).
4	Selection list	Shows the selected INU servers and the connected USB devices.
5	Display area for the properties	Shows information on the selected INU server or USB device $\Rightarrow$ $\blacksquare$ 33.

Detailed information on how to use the SEH UTN Manager can be found in the  $\Rightarrow \square$  'SEH UTN Manager Online Help'. To start the online help, go to the SEH UTN Manager menu bar and select **Help** – **Online Help**.



Some SEH UTN Manager features might not be displayed or are displayed as inactive. This depends on

the type and location

- the type and location of the selection list
- the user's rights and the group memberships on the client
  the client operating system

the settings of the product-specific security mechanisms
 the status of the INU server and respective USB port
 More details can be found in chapter 'SEH UTN Manager – Feature Overview' ⇒

### Versions

The SEH UTN Manager is available in two versions:

- Complete Version: SEH UTN Manager with graphical user interface (⇒Figure 2.2-2 🖺 13) and additional features.
- Minimal version (without graphical user interface): Usage only via command line ('utnm' ⇒ 🖺 37) and automated programs ('UTN Actions' ⇒ 🖺 29).



Important:
The complete version is recommended for general use.
The minimal version is to be used by experts only!

In both versions the 'SEH UTN Service' works in the background and is automatically active after the system start. The service can be controlled by means of the usual administration methods.

Additionally, the following user groups are distinguished:

- users with administrative rights (administrator)
- users without administrative rights (standard user)



Some features can only be configured by administrators. More details can be found in chapter 'SEH UTN Manager – Feature Overview'  $\Rightarrow$  124.

### Installation

In order to use the SEH UTN Manager, the program must be installed on a computer with a Windows operating system. The SEH UTN Manager installation file can be found on the SEH Computertechnik GmbH website:

https://www.seh-technology.com/us/services/downloads/industrial/inu-100.html



The installation file is available as '\*.exe' for Windows systems. The file contains both versions of the SEH UTN Manager. Instead of the standard installation, an unattended installation may be carried out.

- ✓ Microsoft Windows (32/64-Bit; Windows 10 or higher, Server 2012 R2 or higher)
- ✓ The installation can only be carried out by users with administrative rights.

### Standard Installation

- 1. Start the SEH UTN Manager installation file.
- 2. Follow the installation routine.
- → The SEH UTN Manager is installed on your client.

If used in server-based environments (Citrix XenApp, Microsoft Remote Desktop Services/Terminal Services) and virtualized environments (VMware, Citrix XenDesktop, Microsoft HyperV, etc.) the Windows system may lack required drivers. The installation routine checks the available drivers during the installation process. If drivers are missing, another installer ('USB driver for SEH UTN Manager'). This installer will prepare the installation of the required drivers.

### **Unattended Installation**

An unattended installation takes place without any time-consuming user input. In addition, the SEH UTN Manager UTN Manager can be automatically installed on a large number of clients via login scripts. For more information, refer to the documentation of your operating system.

### Default settings used:

- · Complete version
- Installation for all users of the client
- Target directory: %PROGRAMFILES%\SEH Computertechnik GmbH\SEH UTN Manager (Where %PROGRAMFILES% is a Windows environment variable for the 'Program Files' directory. By means of the command line, the path can be determined as follows: echo %PROGRAMFILES%)
- Start menu folder: SEH Computertechnik GmbH\SEH UTN Manager
- A desktop shortcut will be created.
- SEH UTN Manager will start automatically after the installation.



### **Important:**

By installing the SEH UTN Manager, you automatically accept the SEH Computer-technik GmbH agreement concerning the license and the use of the software. The agreement can be found on the website of SEH Computertechnik GmbH:

https://www.seh-technology.com/services/licenses.html



- 1. Open the command-line interface.
- 2. Change to the directory containing the SEH UTN Manager installation file.
- 3. Enter the command sequence: "sehutnmanager-win-X.X.X.exe" /S [<command>] Commands: ⇒Table 2.2-2 

  16.
- 4. Confirm your entry.
- → The sequence of commands will be run.

Table 2.2-2: Installation commands

Command	Description
/A	Installs SEH UTN Manager for all users.
/C	Installs SEH UTN Manager for the current user only.
/F= <folder name=""></folder>	Overrides the default folder name of the Start menu folder. Subfolders can be specified with '/'.
/G	Installs the complete version ( $\Rightarrow$ 🖺 15) of SEH UTN Manager.
	Recommended for general use.
/I= <path></path>	Overrides the default installation directory. An absolute path must be specified. It has to be the last parameter used in the command line and must not contain any quotes, even if the path contains spaces.
/K	Does <u>not</u> create a desktop shortcut.
/M	Installs the minimal version ( $\Rightarrow$ 🖺 15) of SEH UTN Manager.
	Expert use only!
/R	Runs SEH UTN Manager after the installation is complete.
/S	Instructs the installation to be silent. There is no user interaction and the user cannot cancel the installation.
/U	Updates an existing SEH UTN Manager.
	(If no SEH UTN Manager is installed, it will be installed using the default installation settings.)
/V1	Enables command line logging to troubleshoot installation problems.
/V2	Creates a log file in the installation folder. The file contains information to troubleshoot installation problems.
/V3	Enables command line logging and creates a log file in the installation directory. Both provide information to help troubleshoot installation issues.
/?	Shows the help page.

## **Program Start**

You can recognize the SEH UTN Manager by its icon: . The program is started with the usual methods of your operating system.

## **Update**

You can check for program updated manually and automatically. More information can be found in the  $\Rightarrow \square$  'SEH UTN Manager Online Help'.

## 2.3 Administration via the SEH Product Manager

The 'SEH Product Manager' is a software tool developed by SEH Computertechnik GmbH for the administration and management of SEH Computertechnik GmbH devices on the network.

- Function 

   □ 18

### **Function**

The software is installed on all clients from which SEH Computertechnik GmbH devices are to be administrated and managed on the network.

After starting the SEH Product Manager, the network is first scanned for connected SEH Computertechnik GmbH devices. All found devices are displayed in the 'device list'. You can select and then administer and manage the devices in the device list.

If a task can be performed using the SEH Product Manager, this will be described in the corresponding chapter.



### **Important:**

The SEH UTN Manager can be used in IPv4 and IPv6 environments. The selection determines which IP version is used in the software.

"IPv4" is default. Selecting "IPv6" is only suitable for IPv6 networks. If you are not sure about your network, select "IPv4 and IPv6".



Figure 2.3-3: SEH Product Manager

1	Menu bar	Available menu items
2	Filter	Filters the displayed devices by product type.
3	Searching	Search function for searching the device list.
4	Device list	Shows the devices found on the network by SEH Computertechnik GmbH.
5	Control Center	Shows the Control Center of the device selected in the device list.
6	Functions for editing the de-	• Refresh: Updates the status of the devices displayed in the list.

- Functions for editing the de-6 vice list
- Search: Searches the network for more devices from SEH Computertechnik GmbH. Found devices are added to the device list.
- Delete: Removes all devices from the device list.

Detailed information on how to use the SEH Product Manager can be found in the ⇒ 🛄 'SEH Product Manager Online Help'. To start the online help system, go to the SEH Product Manager menu bar and select **Help** – **Online** Help.

### Installation

In order to use the SEH Product Manager, the program must be installed on a computer with a Windows operating system. The SEH Product Manager installer can be found on the SEH Computertechnik GmbH website:

https://www.seh-technology.com/us/services/downloads/industrial/inu-100.html



The installation file is available as '\*.exe' for Windows systems.

- ✓ Microsoft Windows (32/64-Bit; Windows 10 or higher, Server 2012 R2 or higher)
- ✓ The installation can only be carried out by users with administrative rights.
- 1. Start the SEH Product Manager installer.
- Follow the installation routine.
- → The SEH Product Manager is installed on your client.

### **Program Start**

You can recognize the SEH Product Manager by its icon: . The program is started with the usual methods of your operating system.

The program automatically searches for SEH Computertechnik devices on the network after starting. For more information see the ⇒ □ 'SEH Product Manager Online Help'.

### **Update**

You can check for program updates manually and automatically. More information can be found in the  $\Rightarrow$   $\Box$  'SEH Product Manager Online Help'.

### 2.4 Administration via Email

You can administrate the INU server via email and thus from any computer Internet access (remote access):

- · Get INU server status
- Set INU server parameters
- INU server update

To do so, you write commands into the email message header ⇒Table 2.4-3 \( \bigle 20.

Table 2.4-3: Commands and comment:

Commands	Option	Description
<command/>	get status	You get the INU server status page.
	get parameters	You get the INU server parameter list.
	set parameters	Sends one or more parameters to the INU server which will then be adopted by the INU server.
		Write the parameters and their values into the email message body: <pre><pre>parameter&gt; = <value></value></pre></pre>
		The syntax and values can be found in the parameter lists .
	update utn	Carries out an automatic update using the software that is attached to the mail.
	help	You get a page with information on remote maintenance.
[ <comment>]</comment>		Freely definable text for descriptions.

The following applies to the instructions:

- · not case-sensitive
- one or more space characters are allowed
- · max. length is 128 byte
- only the ASCII format can be read.

In addition, a TAN is needed to execute updates or parameter changes. To begin with, you have to get a status page via email ( $\Rightarrow$  Table 2.4-3  $\stackrel{\circ}{=}$ 20) because it contains the TAN. You enter the received TAN into the email message body. A space character must follow.

- ✓ An email user account for the INU server is set up on a POP3 server.
- ✓ An email user account for the INU server is set up on an SMTP server.
- ✓ A DNS server is configured on the INU server  $\Rightarrow$   $\triangleq$ 43.
- ✓ POP3 and SMTP parameters have been configured on the INU server ⇒ 150.
- 1. Open an email program.
- 2. Write a new email:
  - As recipient enter the INU server address.
  - Enter a command in the subject line: cmd: <command> [<comment>]
    Commands and comments: ⇒Table 2.4-3 

    20.
  - Into the email message body enter a TAN, if applicable.
- 3. Send the email.
- → The INU server receives the email and carries out the instruction.

### **Examples**

You want to get the INU server parameter list:

To: INUserver@company.com

Subject: cmd: get parameters

You want to set the 'configuration' parameter:

To: INUserver@company.com
Subject: cmd: set parameters

Email message body:TAN = nUn47ir79Ajs7QKE

sys descr = <your description>

## 3 Working with the SEH UTN Manager

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH. The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the INU servers..

- How to Find INU Servers/USB Devices in the Network ⇒ 23

- How to Use the SEH UTN Manager without Graphical User Interface (utnm) ⇒ 

  ■37

### 3.1 How to Find INU Servers/USB Devices in the Network

The software tool SEH UTN Manager is used to establish and manage connections to the USB devices connected to the INU servers.

After the SEH UTN Manager is started, the network has to be scanned for connected INU servers. The network range to be scanned is freely definable; the search can be effected via multicast and/or in definable IP ranges. The default setting is multicast search in the local network segment.

All INU servers found and their connected USB devices are displayed in the 'network list'. To use the USB devices connected to the INU server, you have to add the INU server to the 'selection list'.

You can also directly add an INU server to the selection list. To do this, you need to know its IP address.

### **Defining Search Parameters**

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Program Options**. The **Options** dialog appears.
- Select the Network Scan tab.
- 4. Tick **IP Range Search** and define one or more network ranges.
- 5. Click OK.
- → The settings will be saved.

### **Scanning the Network**

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Selection List Edit**.

The **Edit Selection List** dialog appears.

- 3. Click Scan.
- 4. The network is scanned. The INU servers and USB devices found are displayed in the network list.

### Adding the INU Server to the Selection List

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  \( \bigsim 13.
- ✓ The INU server was found via the network scan and is displayed in the network list.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select Selection List Edit.

The **Edit Selection List** dialog appears.

- 3. In the network list, select the INU server to be used.
- 4. Click Add.

(Repeat steps 2 and 3, if necessary.)

- 5. Click OK.
- → The INU servers and the connected USB devices are shown in the selection list.

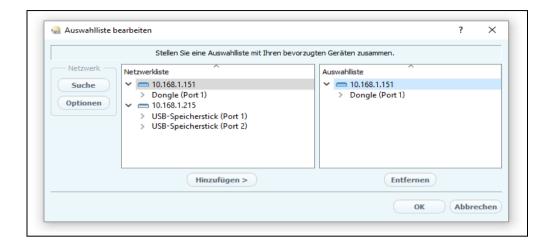


Figure 3.1-1: SEH UTN Manager – Edit Selection List

### **Adding a INU Server via IP Address**

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- ✓ You know the IP address of the INU server.
- 1. Start the SEH UTN Manager.
- Select UTN server Add.
   The Add server dialog appears.
- 3. In the **Host name or IP address** box, enter the IP address of the INU server.
- 5. Click OK.
- → The INU server and the connected USB devices is shown in the selection list.

### 3.2 How to Establish a Connection to a USB Device

To connect a USB device to the client, a point-to-point-connection is established between the client and the USB port of the INU server to which the USB device is connected. The USB device can then be used as if it were directly connected to the client. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it.



### Important:

Special case of compound USB devices

When connecting certain USB devices to a USB port of the INU server, the selection list displays several USB devices on this port. These are compound USB devices. They consist of a hub and one or more USB devices that are all integrated into a single housing.

If the connection is established to a port with a connected compound USB device, all USB devices shown will be connected to the user's client. In this case, each integrated USB device occupies a virtual USB port of the INU server. If the limit is reached, no further USB devices can be used on this INU server.

INU server Number of physical USB ports Number of virtual USB ports INU-100 2 10

- ✓ The SEH UTN Manager (complete version) is installed on the client 

  □ 
  □
  13.
- ✓ The USB port is shown in the selection list  $\Rightarrow$  Figure 3.1  $\trianglerighteq$ 23.
- ✓ All provisions (driver installation, etc.) necessary to operate the USB device locally (i.e. connected directly to the client) have been met on the client. Ideally, the USB device has been connected and operated on the client locally according to the instructions of the manufacturer.
- ✓ The USB port is <u>not</u> connected to another client.
- 1. Start the SEH UTN Manager. In the selection list, select the port.
- 2. In the menu bar, select **Port Activate**.
- → The connection between the USB device and client is established.

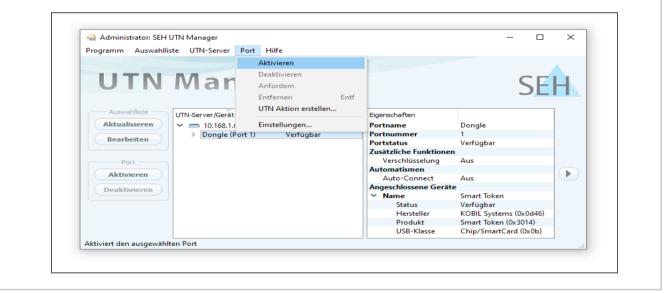


Figure 3.2-2: SEH UTN Manager – USB port activation

### 3.3 How to End the Connection between the USB Device and the Client

If a USB device is connected to a client, the connection is of a point-to-point type. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it. For this reason, you have to end the connection once you are no longer using the USB device.

To end the connection between USB device and client, deactivate the connection between the client and the USB port of the INU server to which the USB device is connected.

- You can also set up an automatic deactivation (Auto Disconnect) ⇒ 

  29.

### **Disconnecting the Device Using the SEH UTN Manager**

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- ✓ The USB port is shown in the selection list  $\Rightarrow$   $\triangleq$ 23.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the port.
- 3. Select **Port Deactivate** from the menu bar.
- → The connection will be deactivated.

### **Disconnecting the Device Using the INU Control Center**

- 1. Start the INU Control Center.
- 2. Select **DASHBOARD**.
- 3. Choose the active connection from the **Attached devices** list and click the **(X)** icon.
- 4. Confirm the security query.
- → The connection will be deactivated.

## 3.4 How to Request an Occupied USB Device

If a USB device is connected to a client, the connection is of a point-to-point type. As long as the connection is established, other users cannot connect the USB device to their client and thus cannot use it.

If you want to use an occupied USB device, you can request it. The other user will receive a release request in form of a pop up. If the user follows your request and releases the USB device by deactivating the connection to the USB device, the connection between the USB device and your client will automatically be activated.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ 🖹 13.
- ✓ The SEH UTN Manager (complete version) is installed on the client of the user who uses the USB device ⇒ 🖹 13.
- ✓ The SEH UTN Manager (complete version) is executed with graphical user interface on both clients.
- ✓ The USB port is shown in the selection list  $\Rightarrow$   $\triangleq$  23.
- ✓ The USB port is connected to another client 

  □ 25 (but not via Auto-Connect).
- 5. In the selection list, select the port.
- 6. In the menu bar, select **Port Request**.
- → The release request will be sent.

## 3.5 How to Automate USB Device Connections and Program Starts

Connections to USB ports of the INU server and the connected USB devices can be automated. Simple to complex processes can be implemented.

- Automatic Connection between a USB Device and Client When a Print Job Is Received (Print-On-Demand)
   ⇒ 30



This chapter describes features of the SEH UTN Manager with which automatisms are set up. Users who have expert knowledge in scripting should use the command line tool 'utnm'  $\Rightarrow \mathbb{R}$  37.

### Automatic Connection If a USB Device Is Connected (Auto-Connect)

Auto-Connect automatically establishes a connection to a USB port and the connected USB device as soon as a USB device is connected to the USB port. Auto-Connect must be activated for each USB port and works for all USB devices which are connected to the USB port.

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.
- 2. Select the INU server from the selection list.
- 3. In the menu bar, select **UTN server Activate Auto-Connect**. The dialog **Activate Auto-Connect** appears.
- 4. Tick the option for the desired USB ports.
- Click **OK**.
- → The setting will be saved. The connection to the USB port and the connected USB device is automatically and immediately activated. If you disconnect the USB device and reconnect it, the connection is again automatically established.



### **Important:**

If you manually deactivate an active USB port connection that was established via Auto-Connect, Auto-Connect will be switched off. If you want to use Auto-Connect again, you will need to reconfigure it later.

### Automatic Deactivation of the Connection after a Time Defined (Auto-Disconnect)

Auto-Disconnect deactivates the connection to a USB port and the connected USB device after a previously defined time. 2 minutes before time runs out, the user will receive a notification and is asked to deactivate their connection in order to prevent data loss and error states. Optionally, a one-off prolongation of the connection by the duration of the defined time can be activated. In this case, the user can choose to prolong the connection or decline it when the notification pops up. Auto-Disconnect allows a large number of network participants to access a small number of devices and avoids idle times.



You can be notified about the free port if a connection is automatically disconnected. For this purpose, set up a notification if the USB port is available  $\Rightarrow B60$ .

- ✓ The INU server is displayed in the 'Automatic Device Disconnect' area ⇒ \( \begin{align\*} \text{23}. \\ \end{align\*}
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.
- 2. Select the INU server in the selection list.
- 3. In the UTN Server menu, select the command "Activate Auto Disconnect". The Activate **Auto Disconnect** dialog appears.
- 4. Activate the option for the desired USB ports.
- 5. Define the desired time period (10-9999 minutes).
- 6. Activate the **Extension** option if required.
- 7. Select the **OK** button.
- → The setting is saved

### Automatic Connection between a USB Device and Client When a Print Job Is Received (Print-On-Demand)

Print-On-Demand automatically establishes a connection between the client and the USB port to which the USB device (printer or multifunction device) is connected when a print job is received.

After completion of the print job, the connection will be automatically disabled.

- ✓ The SEH UTN Manager (complete version) is installed on the client ⇒ \( \begin{aligned} \text{\te}\text{\texi}\text{\text{\text{\text{\text{\texi{\text{\texi{\texi{\text{\texi{\texi}\text{\texi}\text{\texi{\texi{\texi\texi}\text{\texit{\texit{\
- ✓ The USB port is <u>not</u> connected to another client.
- ✓ You are logged on to the client as administrator.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the port.
- 3. In the menu bar, select **Port Activate**.

The connection will be established. The device is installed. A printer object is created on the client.

- 4. In the menu bar, select **Port Settings**.
  - The **Port Settings** dialog appears.
- 5. In the **Automatic device connection** area, tick **Print-On-Demand**.
- 6. Click OK.
  - The setting will be saved.
- 7. Select **Port Deactivate** from the menu bar.
  - The connection will be deactivated.
- → Print-On-Demand is set up.

# Creating a UTN Action: Automated Connections and Program Starts without the SEH UTN Manager Interface

UTN Actions are small files which contain a script that automates the connections to USB ports including connected USB devices. The process defined in the script runs automatically when the file is executed. Since the 'SEH UTN Service' is active in the background, the user does not have to start the SEH UTN Manager interface. I.e., UTN Actions can be used with the complete ( $\Rightarrow$  29) and minimal version ( $\Rightarrow$  13).

UTN Actions are for realizing simple scenarios, such as activating a connection, as well as complex procedures, such as activating a connection and starting an application with time delay. You can create the UTN action with a wizard. The wizard is only available in the complete version ( $\Rightarrow$  13) of the SEH UTN Manager. You can create the following UTN Actions:

- UTN Actions which activate and deactivate the device

  The wizard will automatically create one UTN Action for the activation and one UTN Action for the deactivation of the USB port, including the connected USB device. Both UTN Actions will be saved to the desktop.
- UTN Action which starts an application and activates the device

  After the selection of the application by the user, the wizard will automatically create a UTN Action to start the application and activate the USB port, including the connected USB device. Additionally, you can define a port deactivation after the application is closed.
- Custom UTN Action (Experts only)
   With the help of the wizard, a custom UTN Action can be created. You can create:
  - UTN Actions for the activation and deactivation of the USB port and the connected USB device. You can define additional options.
  - A script for starting the application and activating the USB port and the connected USB device. Additionally, you can define a delay
    for the start of the application, the deactivation of the USB port after the closing of the application and additional options. Finally,
    the complete UTN Action will be created automatically by the SEH UTN Manager and saved by the user.



UTN Actions are based on the command line tool 'utnm'. We recommend experts to use this tool, if they want to create very complex scripts without restraints  $\Rightarrow 13$ .

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  \( \bigsim 13.
- ✓ The USB port is shown in the selection list  $\Rightarrow$   $\triangleq$ 23.
- 1. Start the SEH UTN Manager.
- 2. Select a port from the selection list.
- In the menu bar, select Port Create UTN Action.
   The dialog Create UTN Action appears.
- 4. Follow the instructions of the wizard.
- → A UTN Action will be created. The UTN Action is run by double-clicking the file.

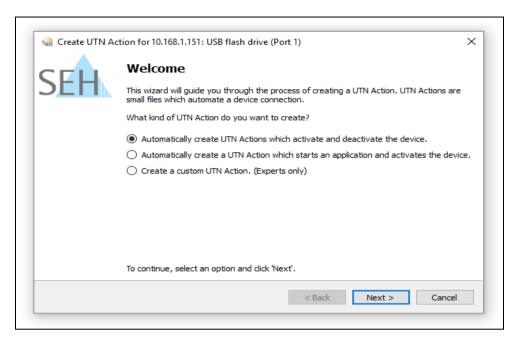


Figure 3.5-3: Create UTN Action dialog



Shortcuts can be moved to any place and renamed after they have been saved.



(Experts only) Custom UTN Actions which activate or deactivate USB devices can be edited after their creation. To do this, edit the command line in the shortcut target.



Expert mode (script): You can also edit the script after its creation using a simple text editor.

### 3.6 How to Find Status Information on USB Ports and USB Devices

You can check the status of USB ports and USB devices at any given time. You can also configure automatic messages. You can use automatic messages to be notified when a USB port becomes available or to receive information about the connection duration.

### **Displaying Status Information**

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  \( \bigsim 13.
- 1. Start the SEH UTN Manager.
- 2. Select the USB port from the selection list.
- ☐ The status information is displayed in the **Properties** area.

### **Notification If a USB Port Becomes Available**

You will receive a message once a network participant deactivates the connection to a USB port and the connected USB device.

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- ✓ The USB port is shown in the selection list  $\Rightarrow$   $\triangleq$ 23.
- 1. In the selection list, select the port.
- In the menu bar, select Port Settings.
   The Port Settings dialog appears.
- 3. Tick the option under **Messages**.
- 4. Click OK.
- → The setting will be saved.

### Message about the Duration of a Connection

You will receive a message if one of your connections to a USB port and the connected USB device exceeds a defined time period.

- In the menu bar, select Program Options.
   The Options dialog appears.
- 2. Select the **Program** tab.
- 3. In the **Messages** area, tick the option.
- 4. Define the desired duration.
- 5. Click OK.
- → The setting will be saved.


# 3.7 How to Use the Selection List and Manage User Access Rights with It

The selection list is the main element in the SEH UTN Manager and shows all embedded INU servers. USB devices can only be used if the INU server to which they are connected is on the list (⇔ 🖹 23). By controlling the selection list you consequently control the user's access to INU servers and the connected USB devices.

By default, all client users use the global selection list in the SEH UTN Manager. However, you can set a user selection list for the client users. This list can be compiled by the users themselves. Alternatively, you as client administrator restrict user rights and provide a list with which only the INU servers you define can be used.

Table 3.7-1: Differences in global and user selection list


### **Global Selection List**

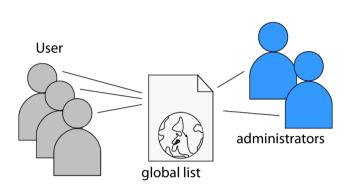

- All users of a client use the same selection list.
- The users can access all devices listed in the selection list.
   (Provided that no security mechanisms have been specified via the INU Control Center.)
- List is stored at: Registry

### The selection list can be edited by administrators.

#### **User Selection List**

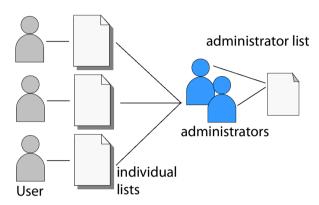

- Each user has their own selection list.
   All administrators have the same selection list.
- The users can access all devices listed in the selection list.
   (Provided that no security mechanisms have been
- List ('ini'-file) is stored at:

%APPDATA%\SEH Computertechnik GmbH\SEH UTN Manager.ini

(%APPDATA% is an environment variable for a Windows user; the path for the current user can be determined with using command line: echo %APPDATA%

### **Example Windows 10:**

echo %APPDATA% yields
C:\Users\Username\AppData\Roaming

specified via the INU Control Center.)

\SEH Computertechnik GmbH\SEH UTN Manager.ini

### Complete path to the ini file:

C:\Users\User name\AppData\Roaming\SEH
Computertechnik GmbH\SEH UTN Manager.ini)

 The selection list can be edited by administrators or by users with write access to the ini-file.
 Users with read-only access to the ini-file cannot edit the selection list and have limited access to SEH UTN Managers functions.



Which functions (selection list editing etc.) can be used in the SEH UTN Manager depends on the selection list type (global/user) and user account type on the client (administrator/user; user with/without write access to ini-file). For a detailed breakdown see  $\Rightarrow$  Figure 8.4  $\stackrel{\text{light}}{=}$  124.

- Restrict Write Access to the 'SEH UTN Manager.ini'-file ⇒ 136

### Setting Up the Global Selection List for All Users

The global selection list is used by default.

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- ✓ You are logged on to the system as administrator.
- 1. Start the SEH UTN Manager.
- 2. Compose the selection list ⇒ \( \bigsig 23. \)
- In the menu bar, select Program Options.
   The Options dialog appears.
- 4. Select the tab **Selection List**.
- 5. Tick Global selection list.
- 6. Click OK.
- → The setting will be saved. All users of a client use the same selection list.

### **Providing User Selection Lists**

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  \( \bigsim 13.
- ✓ You are logged on to the system as administrator.
- 1. Start the SEH UTN Manager.
- 2. In the menu bar, select **Program Options**.

The **Options** dialog appears.

- 3. Select the tab **Selection List**.
- 4. Tick User selection list.
- 5. Click OK.

Optional: With the following steps you provide a predefined selection list.

- 6. Create a selection list with the desired devices ⇒ \( \bigsig 23. \)
- In the menu bar, select Selection List-Export.

The **Export to** dialog appears.

- 8. Save the file 'SEH UTN Manager.ini' to the user directories:

  %APPDATA%\SEH Computertechnik GmbH\SEH UTN Manager.ini (⇒Table 3.7-1 

  ■34)
- → The setting will be saved. Each user uses their individual (predefined) selection list. The administrators share one selection list.

### Restrict Write Access to the 'SEH UTN Manager.ini'-file

User selection lists can be set up and edited by the users themselves.

In order to restrict users to just the INU servers you want them to have access to, you can provide a list to users. To do so, you as administrator store a predefined list for the user ( $\Rightarrow$   $\triangleq$ 35) and limit the user to read-only access to the 'SEH UTN Manager.ini'-file. By limiting the user to read-only access, all SEH UTN Manager functions concerning the selection list are disabled for the user.

Use the usual methods of your operating system to turn the ini-files into read-only files. For more information, read the documentation of your operating system.

# 3.8 How to Use the SEH UTN Manager without Graphical User Interface (utnm)

The SEH UTN Manager is available in two versions  $\Rightarrow$  13. It can be used without graphical user interface in the minimal version. To do so, the tool 'utnm' is utilized to use UTN features via the command line of the operating system:

- directly, by entering commands in a certain syntax and executing them
- via scripts which contain commands in a certain syntax that will be executed automatically and step by step by the command line interpreter



Use scripts to automate frequently recurring command sequences such as port activations.



The execution of scripts can be automated as well, e.g. by means of login scripts.

- Syntax 
   □ 37

### **Syntax**

"<path utnm.exe>" /c "command string" [/<command>]

The file 'utnm.exe' can be found in the program folder of the SEH UTN Manager.

### Commands

Rules for commands:

- Underlined elements are to be replaced by the appropriate values (e.g. <u>server</u> = IP address or host name of a INU server)
- elements in square brackets are optional.
- not case-sensitive
- only the ASCII format can be read.

### **Command**

/c "command string"

or

/command "command string"

### Description

Runs a command. The command is specified in greater detail by the command string. Command strings:

- activate <u>server port number</u>
   activates the connection to a USB port and the connected USB device.
- activate <u>server</u> <u>vendor ID</u> (VID) <u>product ID</u> (PID)
   activates the connection to a USB port and the first free connected
   USB device with the defined IDs, if several identical USB devices are
   connected to the INU server.
- deactivate <u>server</u> <u>port number</u>
   deactivates the connection to a USB port and the connected USB device.
- set autoconnect=true|false <u>server</u> <u>port number</u> activates/deactivates Auto-Connect (⇒ <u>1</u>26) for the USB port.
- set userportkey=port key server port number stores a USB port key (⇒ 184) locally on the system for the current user account. This way, the USB port key is always automatically sent and does not need to be specified each time with the command / k USB port key or /key USB port key (see below). (To remove the USB port key use the command string set userportkey= server port number)



**Important:** The command only sets the key permanently to make the USB device available.

• set autoconnectportkey=<u>port key server port number</u> stores a USB port key (⇒ <u>B84</u>) locally and system-wide for the Auto-Connect function (⇒ <u>B26</u>). This way, the USB port key is always auto-matically sent and does not need to be specified each time with the command /k <u>USB port key</u> or /key <u>USB port key</u> (see below). (To remove the USB port key use the command string set autoconnectportkey= server port number)



### **Important:**

The command only sets the key permanently to make the USB device available.

- find [IP address-IP address] searches for all INU servers in the network segment and shows the INU servers found with IP address, MAC address, model and software version. IP address ranges can also be searched.
- find6
   Searches for all INU servers in the network segment via IPv6 and shows the servers found with IP address, MAC address, model and software version.

Command	Description
	<ul> <li>state <u>server</u> <u>port number</u>     displays the status of the USB device connected to the USB port.</li> <li>getlist <u>server</u>     shows an overview of the USB devices connected to the INU server (including port number, vendor ID, product ID, vendor name, product name, device class, and status).</li> </ul>
/h	Shows the help page.
or /help	
/k USB port key	Specifies a USB port key ⇒ 🖺 84.
or /key USB port key	Important: The command only enters the key to make the USB device available.  Use the command /c "command string" or /command "command string" to permanently store a USB port key on the system so that it is sent automatically each time (see above).  The USB port key configuration is done via the INU Control Center ⇒ ■84.
/mr or	Separates the output of the command string $getlist$ with tabulators and the output of $find$ with commas.
<pre>/machine readable /nw or /no-warnings</pre>	Suppresses warning messages.
/o or /output	Shows the output in the command line.
/p port number	Uses an alternative UTN port.
or /port port number	Use this command if the UTN port number was changed (⇒ 🖺 58).
/q or /quiet	Suppresses the output.
/sp port number  or  /ssl-port port number	Uses an alternative UTN port with SSL/TLS encryption. Use this command if the UTN SSL port number was changed (⇔ 🖺 58).
/t seconds or	Specifies a timeout for the command strings activate and deactivate.
/timeout <u>seconds</u>	

Command	Description
/v	Shows version information about utnm.
or	
/version	

### Return

After a command is executed, a return indicates success or failure of the process. The returned information is a status combined with a return value (return code). If the output is suppressed ('/quiet'  $\Rightarrow$  39), only the value is returned.

The return can be used to determine how the process proceeds, e.g. in a script.

Return Value	Description
0	The command was executed successfully.
20	Activation failed.
21	Deactivation failed.
23	Is already activated.
24	Is already deactivated or not available.
25	Activation failed: Another user has activated the USB port incl. device.
26	Not found: There is no device connected to the USB port or the USB port key ( $\Rightarrow$ $\implies$ 84) is missing or wrong.
29	Not found: No USB device with this VID and PID connected.
30	Isochronous USB devices are not supported.
31	UTN driver error. Contact the SEH Computertechnik GmbH support ⇒ 🖹 7.
40	No network connection to the INU server.
41	An encrypted connection to INU server cannot be established.
42	No connection to UTN service.
43	The DNS resolution failed.
44	Insufficient rights (administrative rights required).
47	This feature is not supported.
200	Error (with error code).

### **Using utmn via Command Line**

- ✓ The SEH UTN Manager is installed on the client  $\Rightarrow$   $\blacksquare$ 13.
- ✓ The IP address or host name of a INU server is known.
- 1. Open the command-line interface.
- 2. Enter the sequence of commands; see 'Syntax'  $\Rightarrow$  \$\mathbb{\mathbb{m}}37 and 'Commands'  $\Rightarrow$  \$\mathbb{\mathbb{m}}37.
- 3. Confirm your entry.
- → The sequence of commands will be run.

Example: Activating a USB device on port 3 of the INU server with the IP address 10.168.1.167

"C:\Program Files\SEH Computertechnik GmbH\SEH UTN Manager\utnm.exe" /c "activate 10.168.1.167 3"

### **Creating a utnm Script**

- ✓ The SEH UTN Manager is installed on the client 

  □ 13.
- ✓ The IP address or host name of a INU server is known.
- ✓ You know how to create and use scripts in your operating system. If needed, refer to the documentation of your operating system.
- 1. Open a text editor.
- 2. Enter the sequence of commands; see 'Syntax'  $\Rightarrow$  \$\mathbb{
- 3. Save the file as executable script on your client.
- → The script is saved and can be used.

# **4 Network Settings**

To optimally embed your INU server into your network, you can configure the following settings:

- How to Configure IPv4 Parameters ⇒ 1243
- How to Configure IPv6 Parameters ⇒ 1246

- How to Configure Email (POP3 and SMTP) ⇒ 🖺 50
- How to Configure Bonjour ⇒ 🖹 52

#### **How to Configure IPv4 Parameters** 4.1

In the hardware installation ( Hardware Installation Guide') the INU server is connected to the network. The INU server then checks if it receives an IPv4 network configuration (IP address, subnet mask, gateway, DNS - Domain Name Service) dynamically over DHCP (Dynamic Host Configuration Protocol). If this is not the case, the INU server assigns itself an IP address via Zeroconf from the address range which is reserved for Zeroconf (169.254.0.0/ 16).



### **Important:**

If the INU server is connected to an IPv6 network, it will automatically receive an additional IPv6 address ⇒ 🖺 46.

The IPv4 address assigned to the INU server can be found via the SEH UTN Manager and SEH Product Manager software tools. This step usually is carried out during the initial set up (□ 🛄 'Quick Installation Guide'). As an alternative to automatic configuration via DHCP or Zeroconf, you can assign a manual (static) IPv4 network configuration to the INU server.

- Assigning an IPv4 network configuration using the INU Control Center 

   □ □ 43
- Determining the IPv4 Address using the SEH UTN Manager and Assigning an IPv4 Network Configuration ⇒ **44**

### Assigning an IPv4 network configuration using the INU Control Center

- ✓ For DHCP: Your network has a DHCP server.
- ✓ For DNS: Your network has a DNS server.
- 1. Start the INU Control Center.
- Select NETWORK IPv4.
- 3. Configure the IPv4 parameters; 

  □ Table 4.1-1 

  □ 43.
- 4. Click Save & Restart to confirm.
- → The settings will be saved.

Table 4.1-1: IPv4 parameters

Parameters	Description
DHCP	Enables/disables the DHCP protocol.
	If DHCP is enabled in your network, IPv4 network configuration (IP address, subnet mask, gateway, DNS) is automatic.
	We recommend disabling this option once an IP address has been assigned to the INU server.
ARP/PING	Enables/disables the ARP/PING protocol.
	You can use the commands ARP and PING to change an IP address. The implementation depends on your system; read the documentation of your operating system.
	We recommend disabling this option once an IP address has been assigned to the INU server.
IP Address	IP address of the INU server.

Parameters	Description
Prefix length	The IP address and the prefix length defines the network mask of the INU server.
	Subnet masks are used to logically partition big networks into subnetworks. If you are using the INU server in a subnetwork, it requires the subnet mask of the subnetwork.
Router	Router address (Gateway) of the INU server
	IP addresses in another network are addressed via the router address.

### Assigning an IPv4 Network Configuration using the SEH UTN Manager

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- ✓ The INU server is shown in the selection list  $\Rightarrow$   $\blacksquare$ 23.
- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the INU server.
- In the menu bar, select UTN Server-Set IP Address.
   The Set IP Address dialog appears.
- 4. Enter the relevant TCP/IP parameters.
- 5. Click OK.
- $\rightarrow$  The settings will be saved.

# Determining the IPv4 Address using the SEH UTN Manager and Assigning an IPv4 Network Configuration

The SEH UTN Manager searches the network for connected INU servers.

- ✓ The SEH UTN Manager (complete version) is installed on the client  $\Rightarrow$  13.
- 1. Start the SEH UTN Manager.
- Confirm the note dialog Your Selection List seems to be empty with Yes.
   If no note dialog is available and the main dialog appears, select Selection List-Edit in the menu bar.
   The Edit Selection List dialog appears.
- 3. In the network list, select the INU server.



If you are using several INU servers of the same model, you can identify a specific device by its default name ( $\Rightarrow \mathbb{B}43$ ) or the connected USB devices.

- 4. In the shortcut menu, select **Set IP Address**.
  - The **Set IP Address** dialog appears.
- 5. Enter the relevant TCP/IP parameters.
- 6. Click OK.
- → The settings will be saved.

### **Determining the IPv4 Address using the SEH Product Manager**

- ✓ The SEH Product Manager is installed on the client ⇒ 🖺 13.
- 1. Start the SEH Product Manager. The device list is displayed.
- 2. Search for the INU server in the device list. It can be identified by its product type and MAC address (which can be found on the device type plate).
- 3. Read the IP address of the INU server from the device list.



If you select the INU server in the device list, the INU Control Center will be displayed. If necessary, you can assign the IPv4 network configuration directly there  $(\Rightarrow 143)$ .

# 4.2 How to Configure IPv6 Parameters

IPv6 (Internet Protocol Version 6) is the successor of the still predominantly used IPv4 (Internet Protocol Version 4). IPv6 offers the same basic functions but has many advantages such as the increased address space of  $2^{128}$  (IPv6) instead of  $2^{32}$  (IPv4) IP addresses and auto configuration.



### Important:

IPv6 address notation differs from IPv4: An IPv6 address consists of 128 bits. The normal format of an IPv6 address is eight fields. Each field contains four hexadecimal digits representing 16 bits.

Example: 2001:db8:4:0:2c0:ebff:fe0f:3b6b

As a URL in a Web browser, an IPv6 address must be enclosed in square brackets. This prevents port numbers from being mistakenly regarded as part of an IPv6 address.

Example: http://[2001:db8:4:0:2c0:ebff:fe0f:3b6b]:443

The URL will only be accepted by browsers that support IPv6.

You can embed the INU server into an IPv6 network.

The INU server will automatically receive one or more IPv6 addresses in addition to its IPv4 address. To optimally embed the INU into your network, you can configure IPv6 parameters.

- 1. Start the INU Control Center.
- Select NETWORK IPv6.
- 3. Configure the IPv6 parameters; ⇒Table 4.2-2 🖺 46.
- 4. Click Save & Restart to confirm.
- $\rightarrow$  The settings will be saved.

Table 4.2-2: IPv6 parameters

Parameters	Description
IPv6	Enables/disables the IPv6 functionality of the INU server.
Automatic configuration	Enables/disables the automatic assignment of the IPv6 address to the INU server.
IPv6 address	Defines an IPv6 unicast address in the format n:n:n:n:n:n:n:n which is manually assigned to the INU server.
	<ul> <li>Every 'n' represents the hexadecimal value of one of the eight 16 bit elements of the address.</li> </ul>
	<ul> <li>Leading zeros can be omitted.</li> </ul>
	<ul> <li>An IPv6 address may be entered or displayed using a shortened version when successive fields contain all zeros (0). In this case, two colons (::) are used.</li> </ul>
Router	Manually defines a static router to which the INU server sends its requests.
Prefix length	Defines the length of the subnet prefix for the IPv6 address. The value 64 is preset.
	Address ranges (e.g. your network) are specified with prefixes. To do this, the prefix length (number of bits used) is added to the IPv6 address as a decimal number and the decimal number is preceded by '/'.

### 4.3 How to Use the INU Server in VLAN Environments

The INU server supports VLAN (Virtual Local Area Network) according to 802.1Q.

A VLAN divides a physical network into logical subnetworks. Each subnetwork is its own broadcast domain, so data packets cannot be exchanged between subnetworks. VLANs are used to structure networks and, above all, to secure them.

Each USB device can be assigned to a VLAN. To transfer VLAN data via the USB ports, you must first enter the VLANs on the INU server. After this, the USB ports used for forwarding data must be linked to the specified VLANs.



The access to USB devices can be regulated particularly well with VLAN: a defined group of network users may use certain USB devices.

Inform yourself on how to implement VLAN in your environment and then set up the INU server for it.



### **Important:**

SNMP works only over LAN and the VLAN specified in the selection menu.

### **Configure IP management VLAN**

- 1. Start the INU Control Center.
- 2. Select **NETWORK IP VLAN**.
- 3. Configure the IP VLAN parameters; ⇒ Table 4.3-3 \( \bigsigmu 47.
- 4. To confirm, click **Save**.
- 5. The settings will be saved.

Table 4.3-3: IP management VLAN parameters

Parameters	Description
IP management VLAN	Enables/disables the forwarding of IP management VLAN data.  If this option is enabled, SNMP is only available in the IP management VLAN.
Management VLAN selection menu	Sets the management VLAN in the network.  Note: From the configured Client VLANs (⇔Table 4.3-4   \$\begin{align*} \text{4.3-4} \begin{align*} \text{4.8}, you can select a specific one or each as a management VLAN.
TCP Access via LAN (untagged)	Enables/disables the web access INU Control Center to the INU server via IP packets without tag.  If this option is disabled, the INU server can only be administrated via VLANs.  Note: The SNMP works exclusively via LAN and the VLAN specified in the selection menu.

### **Define a IP Client VLAN**

- 1. Start the INU Control Center.
- 2. Select **NETWORK IP VLAN**.
- 3. Configure the IP VLAN parameters; ⇒ Table 4.3-4 🖺 48.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

Table 4.3-4: IP client VLAN parameters

	·
Parameters	Description
VLAN	Enables/disables the forwarding of IP client VLAN data.
IP Address	IP address of the INU server within the IP client VLAN.
Prefix length	The IP address and the prefix length defines the network mask of the INU server.
Router	Router address of the IP client VLAN.
VLAN ID	ID for the identification of the IP client VLAN (0-4096).



Use **Auto-fill** to automatically fill **VLAN**, **IP address** and **Subnetmask** with the values from line 1. **VLAN ID** will automatically be counted up by '1'.

### Allocating a IP Client VLAN to a USB Port

- 1. Start the INU Control Center.
- 2. Select **SECURITY USB**.
- 3. Select the appropriate VLAN assignment from the **VLAN** drop-down list.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

INU User Manual Windows Network Settings

# 4.4 How to Configure the DNS

The DNS - Domain Name Service is responsible for resolving IP addresses and domain name addresses in a network. The INU server dynamically configures the DNS using the protocol DHCP (Dynamic Host Configuration Protocol). during the IP network configuration. This step usually is carried out during the initial set up ( $\Rightarrow \Box$  'Quick Installation Guide') of the INU server during the hardware installation ( $\Rightarrow \Box$  'Hardware Installation Guide').

As an alternative to automatic configuration via DHCP or Zeroconf, you can assign a manual (static) IPv4 network configuration to the INU server.

### **Configure DNS via utnserver Control Center**

- ✓ For DHCP: Your network has a DHCP server.
- ✓ For DNS: Your network has a DNS server.
- 1. Start the INU Control Center.
- 2. Select **NETWORK DNS**.
- 3. Configure the DNS parameters; ⇒Table 4.4-5 \( \bigsige 49.
- 4. Click Save & Restart to confirm.
- → The settings will be saved.

Table 4.4-5: DNS parameters

Parameters	Description
DNS	Enables/disables the name resolution via a DNS server.
	Important: Only DNS allows you to use host names instead of IP addresses if you define servers such as e.g. a time server on the INU server.  Example: Time server configuration (□ 157) with ntp.server.de instead of 10.168.0.140.
Primary DNS server	Defines the IP address of the primary DNS server.
Secondary DNS server	Defines the IP address of the secondary DNS server.
	The secondary DNS server is used if the first one is not available.
Domain name (suffix)	Defines the domain name of an existing DNS server.
Preferred address type	Specifies which address type is used after the IP address is returned from the DNS server. (This option is only relevant if "IPv4 and IPv6" is enabled.)

INU User Manual Windows Network Settings

# 4.5 How to Configure Email (POP3 and SMTP)

The INU server uses email for a range of functions:

• The INU server can be administered using email ⇒ \( \bigsize 20. \)

- POP3 (Post Office Protocol Version 3), to allow the INU server to retrieve email from an email server.
- Simple Mail Transfer Protocol (SMTP) to send email.

For this, the INU server (client) needs an email user account on an email server.

- Configuring SMTP ⇒ 151

### **Configuring POP3**

- ✓ An email user account for the INU server is set up on a POP3 server.
- 1. Start the INU Control Center.
- 2. Select NETWORK Email.
- 3. Configure the POP3 parameters; ⇒ Table 4.5-6 \( \bigsize \) 50.
- 4. To confirm, click Save.
- $\rightarrow$  The settings will be saved.

Table 4.5-6: POP3 parameters

rubic 1.5 o. 1 or 5 parameters	
Parameters	Description
POP3	Enables/disables the POP3 functionality.
POP3 – Server Address	Defines the POP3 server via its IP address or host name.
	A host name can only be used if a DNS server ( $\Rightarrow$ $\blacksquare$ 43) was configured beforehand.
POP3 – Server Port	Defines the port which the INU server uses to receive emails.
	The default port number for POP3 is 110. The default port number for SSL/TLS (parameter 'POP3 – Security' $\Rightarrow$ $\bigcirc$ 50) is 995. If required, read the documentation of your POP3 server.
POP3 – Security	Defines the authentication method to be used:
	<ul> <li>APOP: encrypts the password when logging on to the POP3 server.</li> </ul>
	<ul> <li>SSL/TLS: encrypts the entire communication with the POP3 server. The encryption strength is defined via the encryption protocol and level          □69.</li> </ul>
POP3 – Check mail every	Defines the time interval (in minutes) which with the POP3 server is checked for emails.
POP3 – Ignore mail exceed-	Defines the maximum email size (in Kbyte) to be accepted by the INU server.
ing	(0 = unlimited)
POP3 – User name	Defines the user name used by the INU server to log on to the POP3 server.
POP3 – Password	Defines the user password used by the INU server to log on to the POP3 server.

### **Configuring SMTP**

- ✓ An email user account for the INU server is set up on an SMTP server.
- 1. Start the INU Control Center.
- 2. Select **NETWORK Email**.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

Table 4.5-7: SMTP Parameters

Table 1.5 /1 Sivili Talallicters	
Parameters	Description
SMTP – Server Address	Defines the SMTP server via its IP address or host name.
	A host name can only be used if a DNS server ( $\Rightarrow$ $\blacksquare$ 43) was configured beforehand.
SMTP – Server Port	Defines the port which the INU server and SMTP server use to communicate.
	The default port number for SMTP is 25. For SSL/TLS (parameter 'SMTP – SSL/TLS' $\Rightarrow$ $\implies$ 51), SMTP servers use by default port 587 (STARTSSL/STARTTLS) or the old port 465 (SMTPS). If required, read the documentation of your SMTP server.
SMTP – SSL/TLS	Enables/disables SSL/TLS.
	SSL/TLS encrypts the communication from the INU to the SMTP server. The encryption strength is defined via the encryption protocol and level $\Rightarrow$ $\implies$ 69.
SMTP – Sender name	Defines the email address used by the INU server to send emails.
	Very often the name of the sender and the email account user name are identical.
SMTP – Login	Enables/disables SNMP authentication. To send emails, the INU sends its user name and password to the SMTP server to authenticate itself. Enter user name (parameter 'SMTP – User name' $\Rightarrow$ $\implies$ 31) and password (parameter 'SMTP – Password' $\Rightarrow$ $\implies$ 31).
	Some SMTP servers require SMTP authentication to prevent fraudulent use (spam).
SMTP – User name	Defines the user name used by the INU server to log on to the SMTP server.
SMTP – Password	Defines the password used by the INU server to log on to the SMTP server.
SMTP – Security (S/MIME)	Enables/disables signing email using S/MIME (Secure/Multipurpose Internet Mail Extensions).
	A signature created by the sender allows the recipient to verify the identity of the sender and to make sure that the email was not modified. All S/MIME security features require an S/MIME certificate $\Rightarrow$ $175$ .
SMTP – Attach public key	Sends the public key together with the email.
	Many email clients require the public key to be attached in order to view the emails.
SMTP – Encrypt	Enables the encryption of emails. Only the intended recipient can open and read the encrypted email.

# 4.6 How to Configure Bonjour

Bonjour is a technology which automatically detects devices and services in TCP/IP networks.

The INU server uses Bonjour to

- · verify IP addresses
- · announce and find network services
- match host names and IP addresses
- 1. Start the INU Control Center.
- 2. Select NETWORK Bonjour.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

Table 4.6-8: Bonjour parameters

Parameters	Description
Bonjour	Enables/disables Bonjour.
Bonjour name	Defines the Bonjour name of the INU server.
	The INU server uses this name to announce its Bonjour services. If no Bonjour name is entered, a default name will be used (device name@ICxxxxxxx).

INU User Manual Windows Network Settings

# 4.7 How to Configure Server Services

Some features of the INU server are based on services running on external servers:

- Monitoring (⇒ 🖺 62): Export the collected values to a WebDAV and/or syslog-ng server.

To use these features, you must first implement the corresponding server service on your network. Then configure the basic server service settings and functionality on the INU server.

- " ⇒ 🖺 53

### **WebDAV Server Configuration**

The WebDAV (Web-based Distributed Authoring and Versioning) protocol allows you to transfer files and directories over HTTP. The protocol also has a versioning mechanism.

How you implement WebDAV in your network depends on your network environment. You must handle this implementation yourself.

- ✓ Your network has a WebDAV server.
- 1. Start the INU Control Center.
- Select NETWORK Server.
- 3. Tick the **WebDAV** option.
- 5. To confirm, click Save.
- $\rightarrow$  The settings will be saved.

Table 4.7-1: WebDAV parameters

Parameters	Description
Server address	Defines a WebDAV server by its IP address or host name.
	A host name can only be used if a DNS server ( $\Rightarrow$ $\blacksquare$ 43) was configured beforehand.
User name	Defines the user name used by the INU server to log on to the WebDAV server.
Password	Defines the password used by the INU server to log on to the WebDAV server.
SSL/TLS	Enables/disables SSL/TLS encryption of communication between the INU server and WebDAV server.
	The encryption strength is defined via the encryption protocol and level $\Rightarrow$ $\blacksquare$ 69.

### syslog-ng Server Configuration

The syslog-ng protocol allows you to transmit log messages (monitoring data in this case) to a syslog-ng server over the network. The received data can be written to a database or forwarded to other servers, for example.

How you implement syslog-ng in your network depends on your network environment. You must handle this implementation yourself.

- ✓ Your network has a syslog-ng server.
- 1. Start the INU Control Center.
- 2. Select **NETWORK Server**.
- 3. Tick the **syslog-ng** option.
- → To confirm, click **Save**.

Table 4.7-2: syslog-ng parameters

Parameters	Description
Server address	Defines a syslog-ng server by its IP address or host name.
	A host name can only be used if a DNS server ( $\Rightarrow$ $\blacksquare$ 43) was configured beforehand.
Server port	Defines the port number used by the INU server to communicate with the syslog-ng server.
	The port number 514 is preset.
SSL/TLS	Enables/disables SSL/TLS encryption of communication between the INU server and syslog-ng server.
	The encryption strength is defined via the encryption protocol and level $\Rightarrow$ $\blacksquare$ 69.

# **5 Device Settings**

- How to Configure the (Encrypted) UTN Port ⇒ 🖺 58
- How to Get Messages ⇒ 160

INU User Manual Windows Device Settings

# 5.1 How to Assign a Description

You can assign freely definable descriptions to the INU server. This gives you a better overview of the devices in the network.



You can also assign names to USB ports to distinguish them  $\Rightarrow$  183.

- 1. Start the INU Control Center.
- 2. Select **DEVICE Description**.
- 3. Enter freely definable names for **Host name**, **Description**, and **Contact person**.
- 4. To confirm, click **Save**.
- $\hookrightarrow$  The settings will be saved.

Table 5.1-1: Description

Parameters	Description
Host name	Device name as alternative to IP address. With a name you can identify the INU server more easily in the network, e.g. if you are using several INU servers.
	Is displayed in the INU Control Center, in the SEH UTN Manager and SEH Product Manager.
Description	Device description, e.g. location or department.
	Is displayed in the INU Control Center, in the SEH UTN Manager and SEH Product Manager.
Contact person	Contact person, e.g. device administrator.
	Is displayed in the INU Control Center.

# 5.2 How to Configure the Device Time

The INU server has a device time. Correct time information is required for some network mechanisms, such as authentication for example. Device monitoring ( $\Rightarrow B62$ ) also uses the device time as the timestamp.

The device time of the INU server can be set via an SNTP time server (Simple Network Time Protocol) in the network. A time server synchronizes the time of devices within a network.



We recommend the use of a time server for regular operation, and use of the device clock only for special cases such as the initial installation. This is because a time server guarantees an accurate and synchronous time for all network participants.

In general, today's primary time standard 'UTC' (Universal Time Coordinated) is used. The time zone compensates for location.



### Important:

### Time zone configuration

The time zone adjusts the device time (set using the device clock or received from a time server) to your local zone time including country-specific features such as daylight saving time.

- 1. Start the INU Control Center.
- Select **DEVICE Date/Time**.
- 3. From the **Time zone** list, select the code for your local time zone.
- 4. To confirm, click **Save**.
- → The settings will be saved.

### Device time configuration via time server

- ✓ The network has a time server.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Date/Time**.
- 3. Tick the **Time Server** option.
- 4. Enter the IP address or the host name of the time server in the **Server Address** field. (The host name can only be used if a DNS server was configured beforehand ⇒ ■43.)
- 5. To confirm, click **Save**.
- → The settings will be saved

INU User Manual Windows Device Settings

# 5.3 How to Configure the (Encrypted) UTN Port

A shared port is used for the data transfer between the INU server (including connected USB devices) and the client. It depends on the connection type:

- <u>unencrypted</u> connection: UTN port (default = 9200)
- encrypted connection (⇒ 🖺 90): encrypted UTN port (default = 9443)



### WARNING

The UTN port or encrypted UTN port must not be blocked by security software (firewall).

You can change the port number, e.g. if the port number is already used for another application in your network. The change is made on the INU server and is relayed to the SEH UTN Manager installed on the clients via SNMPv1.

- ✓ SNMPv1 is enabled 

  ⇒ 

  □

  73.
- 1. Start the INU Control Center.
- 2. Select **Device UTN port**.
- 3. Enter the port number into the **UTN port** or **Encrypted UTN port** box.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

INU User Manual Windows Device Settings

# 5.4 How to Write a Description for a USB port

Each USB port can be labeled with additional information. This information is displayed next to the corresponding USB port in the SEH UTN manager.

- 1. Start the INU Control Center.
- 2. Select SECURITY USB.
- 3. In the USB port table for the desired USB port, click the **Change** icon. The **USB Port** page appears.
- 4. Type the information in the **Description** field (maximum length 128byte = 128 ASCII characters).



With the input <br > you create a line break.

- 5. To confirm, click Save.
- → Your entry will be saved as a description of the USB port and displayed in the SEH UTN manager.

# 5.5 How to Get Messages

The INU server can send you different messages:

- Status email: Periodically sent email containing the status of the INU server and of the connected USB devices.
- Event notification via email or SNMP trap:
  - System information (restart, network connections, power supply, temperature warnings, etc.)
  - USB port and USB device information (enabling or disabling a USB port, connecting or disconnecting a USB device, etc.)

You can customize the content of the e-mail subject line.

- Configuring the sending of status emails 

   □ 60
- Configuring event and system notifications via email 

   □60

### Configuring the sending of status emails

The status email can be sent to up to two recipients.

- ✓ SMTP is set up  $\Rightarrow$   $\triangleq$ 50.
- ✓ DNS is set up  $\Rightarrow$   $\triangleq$ 43.
- 1. Start the INU Control Center.
- Select **DEVICE Notification**.
- 3. Enter the recipient into the **Email address** box.
- 4. Tick the desired recipient(s) in the **Status email** area.
- 5. Define the interval.
- 6. To confirm, click Save.
- → The settings will be saved.

### Configuring event and system notifications via email

The event emails can be sent to up to two recipients.

- ✓ SMTP is set up  $\Rightarrow$   $\triangleq$ 50.
- ✓ DNS is set up  $\Rightarrow$   $\triangleq$ 43.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Notification**.
- 3. Enter the recipient into the **Email address** box.
- 4. Tick the options with the desired messages.
- 5. To confirm, click **Save**.
- $\hookrightarrow$  The settings will be saved.

### **Customizing the email subject**

You can specify the content of the email subject line with a-z, A-Z, 0-9 and using variables:

%P = product type %p = model %N = default name %H = host name

%I = IP address %M = MAC address %E = event %D = date %t = time

- 1. Start the INU Control Center.
- 2. Select **DEVICE Notification**.
- 3. Enter the desired variables in the **Email Subject** box.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

### Configuring event and system notifications via SNMP traps

The event SNMP traps can be sent to up to two recipients.

- ✓ SNMPv1 or/and SNMPv3 is set up 

  □ □ 73.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Notification**.
- 3. Enter the IP address of the recipient in the **Address** box.
- 4. Enter the community of the recipient in the **Community** box.
- 5. Select the SNMP protocol version from the **SNMP Version** list.
- 6. Enable the desired messages in the **Content** area.
- 7. To confirm, click **Save**.
- ☐ The settings will be saved.

### 5.6 How to Monitor the INU Server

The INU server has a monitoring function (logging) that collects various values:

- Error (e.g. missing certificates)
- System status (e.g. restarts)
- Parameter Changes
- USB ports and attached devices (e.g. enable or disable a USB port)
- Device access (e.g. logins)

The collected data is stored on the INU server and can be viewed and deleted directly. You can also export the monitoring logs as a backup

- · to your local client
- via WebDAV
- · via Email
- via syslog-ng

With syslog-ng-the data is continuously exported. With WebDAV and e-mail you can choose between different time intervals:

- Continuous backup: On the INU server, the monitoring logs are divided into 2 MB files. Once this size is reached, the file is transferred.
- Daily backup: Transmits the monitoring logs daily at a defined time.
- Manual backup: Transmits the monitoring logs immediately.

This allows you to integrate monitoring of the INU server appropriately into your network environment and to capture, archive and evaluate the collected data as desired.

- Continuously Exporting Monitoring Logs via WebDAV 

   □ 63

### **Configuring Monitoring**

- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **Values** area, activate the desired option.
- 4. To confirm, click Save.
- $\rightarrow$  The settings will be saved.

### **Deleting the Monitoring Log**

- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **Monitoring** area, click the **Delete** button.
- 4. Confirm the security query by clicking **OK**.
- → The monitoring log is deleted.

### Viewing the Monitoring Log

- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **Monitoring** area, click the **Show log** button.
- → The log file is displayed on a separate tab.

### Saving the Monitoring Log Locally

- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **Monitoring** area, click the **Export** button.
- 4. Save the '<default-name>\_monitor.txt' file to your client using your browser.
- → The monitoring log is saved.

### **Continuously Exporting Monitoring Logs via WebDAV**

- ✓ Your network has a WebDAV server.
- ✓ Monitoring is enabled  $\Rightarrow$   $\triangleq$ 62.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **WebDAV Server** area, enter the directory on the WebDAV server where the monitoring logs are to be stored in the **Directory** box.
- 4. Optional: If you want to save the monitoring logs for a single day to subfolders, enable the **Create individual directories for days** option.



### Important:

The FIFO principle (first-in, first-out) is applied after one year. For example, January 01 of last year is overwritten with the files of the current year January 01.

- 5. In the **WebDAV Backup** area, enable the **Continuous Backup** option.
- $\rightarrow$  The settings will be saved.

### **Exporting Monitoring Logs Daily via WebDAV**

- ✓ Your network has a WebDAV server.
- ✓ WebDAV is configured on the INU server ⇒ 153.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **WebDAV Server** area, enter the directory on the WebDAV server where the monitoring logs are to be stored in the **Directory** box.

4. Optional: If you want to save the monitoring logs for a single day to subfolders, enable the **Create individual directories for days** option.



### Important:

The FIFO principle (first-in, first-out) is applied after one year. For example, 1 January of last year will overwritten with files from 1 January of the current year.

- 5. In the **WebDAV Backup** area, enable the **Daily backup at** option.
- 6. From the list, select the hour at which the backup will be transferred.
- 7. To confirm, click **Save**.
- → The settings will be saved.

### **Immediately Exporting Monitoring Logs via WebDAV**

- ✓ Your network has a WebDAV server.

- 1. Start the INU Control Center.
- Select **DEVICE Monitoring**.
- In the WebDAV Server area, enter the directory on the WebDAV server where the monitoring logs are to be stored in the Directory box.
- 4. Optional: If you want to save the monitoring logs for a single day to subfolders, enable the **Create individual directories for days** option.



### Important:

The FIFO principle (first-in, first-out) is applied after one year. For example, January 01 of last year is overwritten with the files of the current January 01.

- 5. Click the **Export manually now** button.
- → The monitoring logs are stored on the WebDAV server.

### **Continuously Exporting Monitoring Logs via Email**

- ✓ SMTP is configured on the INU server  $\Rightarrow$   $\triangleq$ 50.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **Email Recipient** area, enter the email address of the recipient where the monitoring logs will be sent in the **Email Address** box.
- 4. In the **Email Recipient** area, enter the content of the email subject line for monitoring log emails in the **Email Subject** box.

(You can specify the content of the email subject line with a-z, A-Z, 0-9 and using variables:

%P = product type %p = model %N = default name %H = host name

%I = IP address %M = MAC address %E = event %D = date %t = time)

- 5. In the **Email Backup** area, enable the **Continuous Backup** option.
- 6. To confirm, click **Save**.
- → The settings will be saved.

INU User Manual Windows Device Settings

### **Exporting Monitoring Logs Daily via Email**

- ✓ SMTP is configured on the INU server  $\Rightarrow$   $\triangleq$ 50.
- 1. Start the INU Control Center.
- Select **DEVICE Monitoring**.
- 3. In the **Email Recipient** area, enter the email address of the recipient where the monitoring logs will be sent in the **Email Address** box.
- 4. In the **Email Recipient** area, enter the content of the email subject line for monitoring log emails in the **Email Subject** box.

(You can specify the content of the email subject line with a-z, A-Z, 0-9 and using variables:

%P = product type %p = model %N = default name %H = host name

%I = IP address %M = MAC address %E = event %D = date %t = time)

- 5. In the **Email Backup** area, enable the **Daily backup at** option.
- 6. From the list, select the hour at which the backup will be transferred.
- 7. To confirm, click **Save**.
- → The settings will be saved.

### **Immediately Exporting Monitoring Logs via Email**

- ✓ SMTP is configured on the INU server  $\Rightarrow$   $\triangleq$ 50.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Monitoring**.
- 3. In the **Email Recipient** area, enter the email address of the recipient where the monitoring logs will be sent in the **Email Address** box.
- 4. In the **Email Recipient** area, enter the content of the email subject line for monitoring log emails in the **Email Subject** box.

(You can specify the content of the email subject line with a-z, A-Z, 0-9 and using variables:

%P = product type %p = model %N = default name %H = host name

%I = IP address %B = MAC address %E = event %D = date %t = time

- 5. Click the **Export manually now** button.
- → The monitoring logs will be sent by email.

### **Exporting Monitoring Logs via syslog-ng**

- ✓ Your network has a syslog-ng server.

- 1. Start the INU Control Center.
- Select **DEVICE Monitoring**.
- 3. Tick the syslog-ng export option.
- 4. In the **syslog-ng export** area, select the desired **Format**.

(IETF = RFC 5424 or Legacy = RFC 3164/BSD)

→ The settings will be saved.

# 5.7 How to Use the Relay

A device can be connected to the Change Over (CO) relay which is integrated into the INU server. The relay can

- be fixed in a position of your choice: You switch the relay to the desired position (open or closed). The relay stays in the selected position until you manually switch it again.
- display a status:

By default, the relay is in open position. As soon as one chosen device status occurs, the relay switches to closed position. As soon as the status changes back, the relay automatically returns to open position.

- USB device connected (any or on a certain port)
- USB device disconnected (any or on a certain port)
- USB device activated (any or on a certain port)
- USB device deactivated (any or a certain port)
- interrupted network connection
- network connection established

### • Showing events:

The relay switches to closed position as soon as one of the chosen events occurs. After that, the relay will not switch automatically anymore; you first have to manually clear the event / reset the relay.

- USB device connected (any or on a certain port)
- USB device disconnected (any or on a certain port)
- USB device activated (any or on a certain port)
- USB device deactivated (any or a certain port)
- SD card connected
- SD card disconnected
- SC card cannot be used

- interrupted network connection
- network connection established
- INU server restart
- interrupted power supply
- power supply established



The relay can also be switched with a SNMP management tool and the SEH private MIB (download at the website  $\Rightarrow \blacksquare 7$ ). Switching via SNMP is not described here and must be implemented self-dependently.

The relay position and events or status which changed it are displayed in the INU Control Center under **DEVICE** – **Relay** in the **Relay status** table.

### **Application Scenarios**

Fixed position: This is a simple way to switch the relay and therefore the connected device through remote access (HTTP).

Example: The INU server is installed in a production environment. The relay is switched as required by an technician in the control center. Scenarios include a simple connection/disconnection (e.g. diagnosis tool) or an emergency shutdown (e.g. if a sensor warns about overheating).

Displaying a status: The status display is especially useful in production environments.

Example: The quality is checked regularly in a manufacturing process. To do this, a USB analysis device is connected to the INU server and automatically activated via Auto-Connect ( $\Rightarrow$   $\cong$ 29). The activation triggers the relay and a connected light bulb switches on to signal the ongoing check. The employees in the manufacturing environment know about it. As soon as the check is completed and the data transferred over the network to the client with the analysis software, the connection to the USB device is deactivated and it is removed from the INU server. The relay switches and the light bulb goes out. The employees know that the quality check is completed.

Showing events: Event display is most suitable for error warnings, as a manual reset of the relay is required. Example: An interrupted network connection is indicated visually through a red lamp or acoustically with an audio alert. As the reset is to be done manually, the error is displayed permanently by the the changed relay position. That remains the case even if the error is removed (maybe of its own volition), e.g. if the network connection is re-

INU User Manual Windows Device Settings

established after a sever error. This error history can give you valuable information on basic problems in your environment. As soon as the technician has analyzed and removed the error, the relay is returned to its default position so that the next error (e.g. an interrupted power supply) is indicated as well.

### Switch relay to fixed position (or switch manually)

Manually switches the relay to the desired position (open or closed). The relay remains in the selected switching state.

- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- 3. Activate the option user driven for Relay activation.
- 4. From the list, select **Open** or **Closed**.
- 5. To confirm, click Save.
- → The relay stays in the selected position.

### Switch Relay activation event driven

The relay is open by default and automatically switches to the closed position as soon as a predefined event occurs. The device does not automatically switch back to the open position after the event. For this, all events must be deleted and the relay reset.

- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- 3. Activate the option event driven for Relay activation.
- 4. Configure the events at which the relay is to switch.
- 5. To confirm, click **Save**.
- → The settings will be saved.

### Switch Relay activation state driven

The relay is open by default and automatically switches to the closed position as soon as a predefined device status occurs. If the device status changes, the relay automatically switches back to the open position.

- 1. Start the INU Control Center.
- Select **DEVICE Relay**.
- 3. Activate the option state driven for Relay activation.
- 4. Configure the states in which the relay is closed.
- 5. To confirm, click **Save**.
- → The settings will be saved.

### **Set Relay to Default Position**

- ✓ 'Show event' is activated  $\Rightarrow$  \( \bigsim 67.
- 1. Start the INU Control Center.
- 2. Select **DEVICE Relay**.
- 3. In the table **Relay status**, click **Clear all events / reset relay**.
- → The relay is reset.

# **6 Security**

The INU server can be protected with various security mechanisms. These mechanisms secure the INU server itself as well as the connected USB devices. In addition, you can integrate the INU into the protection mechanisms implemented in your network.

- How to Protect Access to the INU Control Center (User Accounts) 

   □ 12
- How to Configure SNMP ⇒ 133

- How to Configure Network Authentication (IEEE 802.1X) 

   □ 80

- How to hide protected USB devices in the SEH UTN Manager selection list? 

   □87
- How to Disable a USB Port ⇒ ■89



### Important:

Protect access to the INU Control Center with user accounts so that security related settings cannot be modified by unauthorized persons.



• SNMP and VLAN are also security concepts that you can use: 

□ ⇔47; 73

## 6.1 How to Define the Encryption Strength for SSL/TLS Connections

Some connections to and from the INU server can be encrypted with the protocol SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security):

- USB connection: Data transfer between the clients and the INU server and the connected USB devices (⇒ 169)

The encryption strength and thus the safety of the connection is defined via the encryption protocol and level. You can choose both.

Each encryption level is a collection of what is called cipher suites. A cipher suite in turn is a standardized sequence of four cryptographic algorithms that are used to establish a secure connection. Based on their encryption strength they are grouped to encryption levels. Which cipher suites are supported by the INU server, i.e. are part of an encryption level, depends on the chosen encryption protocol. You can choose between two encryption levels:

- Any: The encryption is automatically negotiated by both communicating parties. The strongest encryption supported by both parties will always be chosen.
- Low: Only cipher suites with a low encryption are used. (Fast data transfer)
- Medium
- High: Only cipher suites with an strong encryption are used. (Slow data transfer)

When a secure connection is established, the protocol to be used and a list of supported cipher suites are sent to the communication partner. A cipher suite is agreed upon that will be used later on. The strongest cipher suite that is supported by both parties will be used by default.



## **WARNING**

If the communication partner of the INU server does not support the protocol selected and/or if there is no cipher suite that is supported by both parties, the SSL/TLS connection will not be established.

If problems occur, select different settings or reset the parameters of the INU server  $\Rightarrow$   $\implies$  95.



If you want the INU server and its communication partner to automatically negotiate the settings, set both options to **Any**. With these settings, the chances that a secure connection can be established are the highest.

- 1. Start the INU Control Center.
- Select SECURITY SSL/TLS.
- 3. In the **Encryption protocol** area, select the desired protocol.



#### **WARNING**

Current browsers do not support **SSL**. If you use an up-to-date browser and set the combination **SSL** and **HTTPS only** to access the INU Control Center ( $\Rightarrow \blacksquare 71$ ), a connection cannot be established.

Use TLS (and not SSL).

4. In the **Encryption level** area, select the desired level.



## **WARNING**

Current browsers do not support cipher suites from the **Low** level. If you use an up-to-date browser and set the combination **Low** and **HTTPS only** to access the INU Control Center ( $\Rightarrow 171$ ), a connection cannot be established.

Use an encryption level as high as possible.



## **WARNING**

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection ( $\Rightarrow \blacksquare 90$ ), a connection cannot be established.

Use an encryption level as high as possible.

- 5. To confirm, click Save.
- → The setting will be saved.



Detailed information about the individual SSL/TLS connections (e.g. supported cipher suites) can be found on the details page under **Security – SSL/TLS – Details**.

## 6.2 How to Encrypt the Connection to the INU Control Center

You can protect the connection to the INU Control Centerby encrypting it with the SSL (Secure Sockets Layer) protocol and its successor TLS (Transport Layer Security).

- HTTP: unencrypted connection
- HTTPS: encrypted connection
  The encryption strength is defined via the encryption protocol and level ⇒ ■69. When an encrypted connection is to be established, the client asks for a certificate via a browser (⇒ ■75). This certificate must be accepted by the browser; read the documentation of your browser software.



## **WARNING**

Current browsers do not support low security settings. With them a connection cannot be established.

Do  $\underline{not}$  use the following combination: Encryption protocol **HTTPS** and encryption level Low.

- 1. Start the INU Control Center.
- 2. Select SECURITY Control Center.
- 3. In the **Connection** area, tick **HTTP/HTTPS** or **HTTPS only**.
- 4. To confirm, click **Save**.
- → The setting will be saved.

# 6.3 How to Protect Access to the INU Control Center (User Accounts)

By default, anyone who can find the INU server on the network can access the INU Control Center. To protect the INU from unwanted configuration changes, you can set up two user accounts:

- Administrator: Complete access to the INU Control Center. The user can see all pages and change settings.
- USB Manager: Restricted access to the Control Center. The USB Manager can see the start page and there deactivate activated USB devices. Furthermore he has access to the USB subpage and can administrate and configure it.
- Read-only user: Very restricted access to the INU Control Center. The user can only see the 'DASHBOARD' page.

If you have set up user accounts, a login screen is displayed when the INU Control Center is started. You can choose between two login screens:

- Neutral screen: Login screen in which user name and password are to be entered. (better protection)
- List of users: User names are displayed. Only the password has to be entered.

A user account allows for multiple logins, i.e. the account can be used by a single user or by a group of users. Up to 16 users can be logged in at the same time.



## Important:

The user accounts for INU Control Center access are also used for SNMP  $\Rightarrow$   $\blacksquare$ 73. Consider this when setting up user accounts.

For stronger security, you can use a session timeout. If there is no activity within a defined timeout, the user will automatically be logged out.

- 1. Start the INU Control Center.
- Select SECURITY Control Center.
- 3. Define the two user accounts. To do this, in the area **User accounts** enter a **User name** and **Password** respectively.



You can show the typing if you want to make sure that there are no typing errors in the password.

- 4. Tick Restrict Control Center access.
- 5. Under Login window shows, select the type of login screen: Neutral screen or List of users.
- 6. Tick the **Session timeout** option and enter in the box the time in minutes after which the an inactive user should be automatically logged out.
- 7. To confirm, click **Save**.
- → The settings will be saved.

## 6.4 How to Configure SNMP

SNMP (Simple Network Management Protocol) is protocol for configuring and monitoring network elements. The protocol controls communication between the monitored devices and the monitoring station (SNMP management tool). Information can be read and changed.

SNMP exists in 3 versions, the INU supports version 1 and 2.

#### SNMPv1

SNMPv1 is the first and most simple SNMP version. A disadvantage is the insecure access control which is the community: a community groups monitoring station and monitored devices. This makes their administration easier. There are two types of communities, read-only and read/write. For both the community name is also the password used between the monitoring station and the monitored devices. As it is transmitted as clear text, it does not offer sufficient protection.

#### SNMPv3

SNMPv3 is the newest SNMP version. It contains enhancements and a new security concept which includes, amongst other thins, encryption and authentication. Therefore, a SNMP user with name and password must be created in the monitoring station. This user must then be specified in the INU server.



## **Important:**

The user accounts are also used to access the INU Control Center and thus are to be defined under **SECURITY** - **Control Center**, see 'How to Protect Access to the INU Control Center (User Accounts)'  $\Rightarrow$   $\blacksquare$ 72.

- ✓ SNMPv3 users are created in the monitoring station. (Only for SNMPv3.)
- ✓ The SNMPv3 users from the monitoring station are specified on the INU server ⇒ 12. (Only for SNMPv3.)
- 1. Start the INU Control Center.
- 2. Select **SECURITY SNMP**.
- 3. Configure the SNMP parameters; ⇒ Table 6.4-1 ₱73.
- 4. To confirm, click **Save**.
- → The settings will be saved.

Table 6.4-1: SNMP Parameters

Parameters	Description		
SNMPv1	Enables/disables SNMPv1.		
Read-only	Enables/disables the write protection for the community.		
Community	SNMP community name Enter the name as it is defined in the monitoring station.		
	Important: The default name is 'public'. This name is commonly used for read/write communities. We recommend to change it as soon as possible to increase security.		
SNMPv3	Enables/disables SNMPv3.		
Hash	Defines the hash algorithm.		
Access rights	Defines the access rights of the SNMP user.		
encryption	Defines the encryption method.		

## 6.5 How to Block INU Server Ports (TCP Port Access Control)

You can restrict access to the INU server by blocking ports using 'TCP port access control'. If a port is blocked, the protocols and/or services using this port cannot establish a connection with the INU server. Thus attackers have less room for attack.

The security level defines which port types are blocked:

- UTN access (blocks UTN ports)
- TCP access (blocks TCP ports: HTTP/HTTPS/UTN)
- All ports (blocks IP ports)

You have to define exceptions so that your desired network elements, e.g. clients or DNS servers, can establish a connection with the INU server.



#### WARNING

The 'test mode' is active by default so that you can test your settings without locking yourself out. Your settings will be active until the INU is restarted, afterwards access is no longer restricted.

After you have successfully tested your settings, you have to deactivate the test mode so that access control is permanent.

- 1. Start the INU Control Center.
- 2. Select **SECURITY TCP port access**.
- 3. Click Port access control.
- 4. In the **Security level** area, select the desired protection
- 5. In the **Exceptions** area, define the network elements that are to have access to the INU server. To do this, enter the IP or MAC (hardware) addresses and tick the options.



#### Important:

MAC addresses are not delivered through routers!



The prefix notation "<IP address>//refix length>" can be used to freely define IPv4
and IPv6 subnets.

- 6. Make sure that the **Test mode** is enabled.
- 7. Click Save & Restart to confirm.

The settings will be saved.

The port access control is activated until the device is restarted.

8. Check the port access and if it is possible to reach the INU Control Center.



#### **Important:**

If it is not possible to reach the INU Control Center, restart the INU server  $\Rightarrow$  198.

- 9. Deactivate the **Test mode**.
- 10. Click Save & Restart to confirm.
- $\rightarrow$  The settings will be saved.

## 6.6 How to Use Certificates

The INU server has its own certificate management. Digital certificates are data sets, which confirm the identity of a person, object, or organization. In TCP/IP networks they are used to encrypt data and to authenticate communication partners.

The INU needs a certificate for:

- participating in the authentication mechanisms EAP-TLS, EAP-TTLS and PEAP ⇒ ■80

The following certificates can be used in the INU server:

- 1 self-signed certificate
   Certificate generated by the INU server and signed by the INU server itself. The certificate confirms the INU server's identity.
- 1 client certificate, i.e. 1 requested certificate or 1 PKCS#12 certificate
   The client certificate confirms the identity of the INU server with the help of an additional trustworthy authority which is the certification authority (short CA).
  - Requested certificate: As first step, a certificate request is generated on the INU server and then the request
    is sent to a certification authority. In the second step, the certification authority creates a certificate based
    on the request for the INU server and signs it.
  - PKCS#12 certificate Exchange format for certificates. You have a certification authority generate a certificate which is stored in password-protected PKCS#12 format for the INU server. Then you transport the PKCS#12 file to the INU server and install it (and thus the certificate in it).
- 1 S/MIME certificate
  - The INU server uses the S/MIME Certificate to sign and encrypt emails which is sends. The corresponding private key (PKCS#12 format) has to be installed as certificate of it's own in the email program (Microsoft Outlook etc.) so that emails can be verified and, if necessary, decrypted.
- 1–32 CA certificates, also known as root CA certificates.
   Certificates which are issued for a certification authority and confirm its identity. They are used for verifying certificates that have been issued by the respective certification authority. In case of the INU server these are the certificates of communication partners to verify their identity (chain of trust). Thus multi-level public key infrastructures (PKIs) are supported.



## Important:

Upon delivery, a default certificate is stored in the INU server. This certificate is issued by SEH Computertechnik GmbH for each device specifically.

## **Having a Look at Certificates**

- ✓ A certificate is installed on the INU server.
- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- 3. Select the certificate via the icon ...
- → The certificate is displayed.

## **Saving a Certificate Locally**

- ✓ A certificate is installed on the INU server.
- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- → The certificate is stored on your local client.

## **Creating a Self-Signed Certificate**



## Important:

Only one self-signed certificate can be installed on the INU server. To create a new certificate, you must first delete the existing certificate  $\Rightarrow$   $\blacksquare$ 79.

- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- 3. Click Self-signed certificate.
- 4. Enter the relevant parameters; ⇒ Table 6.6-2 ≜76.
- 5. Click Create/Install.
- → The certificate will be created and installed. This may take a few minutes.

Table 6.6-2: Parameters for the Creation of Certificates

Parameters	Description		
Common name	Freely definable certificate name. (max. 64 characters)		
	Use the IP address or host name of the INU server, so that you can clearly match device and certificate.		
Email address	Email address of the person responsible for the INU server. (max. 40 characters; optional)		
Organization name	Name of the company which uses the INU server. (max. 64 characters)		
Organizational unit	Name of a department or subsection in the company. (max. 64 characters; optional)		
Location	Location of the company. (max. 64 characters)		
State name	State where the company is based. (max. 64 characters)		

Parameters	Description	
Domain component	Allows you to enter additional attributes. (Optional entry)	
SAN (multi-domain)	Allows you to enter Subject Alternative Names (SAN). Used to specify additional host names (e.g. domains).  (Optional entry, max. 255 characters)	
Country	Country where the company is based. Enter the two-digit country code according to ISO 3166.  Examples: DE = Germany, GB = Great Britain, US = USA	
Issued on	Date from which on the certificate is valid.	
Expires on	Date from which on the certificate becomes invalid.	
RSA key length	<ul> <li>Defines the length of the RSA key used:</li> <li>512 bit (fast encryption and decryption)</li> <li>768 bit</li> <li>1024 bit</li> <li>2048 bit (standard encryption and decryption)</li> <li>4096 bit (slow encryption and decryption)</li> </ul>	

## **Request and Install Certificate (Requested Certificate)**

A certificate that has been issued by a certification authority for the INU server can be used in the INU server.

To do this, your first create a certificate request and then send it to the certification authority. Based on the request, the certification authority then creates a certificate specifically for the INU server. You install this certificate in the INU server.



#### Important:

You can only install a requested certificate that has been issued based on the certificate request created on the INU server.

If the files do not match, you have to request a new certificate which is based on the current certificate request. If you want to start over, you must delete the certificate request ⇒ ■79.

- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- 3. Click Certificate request.
- 4. Enter the required parameters; ⇒ Table 6.6-2 🖺 76.
- 5. Click Create a request.

The certificate request will be created. This may take a few minutes.

- 6. Select **Upload** and save the requests in a text file.
- 7. Click **OK**.
- 8. Send the text file as certificate request to a certification authority. The certification authority creates the certificate and gives it to you.



## **Important:**

The certificate must be in 'base64' format.

- 9. Click Requested certificate.
- 10. Enter the password into the **Password** box.
- 11. Click Install.
- → The requested certificate is installed in the INU server.

## Installing a PKCS#12 Certificate



## **Important:**

If a PKCS#12 certificate has already been installed in the INU server, you must first delete the certificate  $\Rightarrow$   $\blacksquare$ 79.

- ✓ The certificate has 'base64' format.
- 1. Start the INU Control Center.
- 2. Select SECURITY Certificates.
- Click PKCS#12 certificate.
- 4. Specify the PKCS#12 certificate in the **Certificate file** box.
- 5. Enter the password.
- 6. Click Install.
- → The PKCS#12 certificate will be installed in the INU server.

## Installing an S/MIME CertificatemyUTN-2500



## Important:

If an S/MIME certificate has already been installed in the INU server, you must first delete the certificate  $\Rightarrow$   $\blacksquare$ 79.

- ✓ The certificate has 'pem' format.
- 1. Start the INU Control Center.
- 2. Select **SECURITY Certificates**.
- Click S/MIME certificate.
- 4. Specify the S/MIME certificate in the **Certificate file** box.
- 5. Click Install.
- → The S/MIME certificate is installed in the INU server.

## **Installing a CA Certificate**

- ✓ The certificate has 'base64' format.
- 1. Start the INU Control Center.
- 2. Select **SECURITY Certificates**.
- 3. Click **CA certificate**.
- 4. Specify the CA certificate in the **Certificate file** box.
- 5. Click Install.
- → The CA certificate is installed in the INU server.

## **Deleting Certificates**



## WARNING

To establish an encrypted (HTTPS  $\Rightarrow \blacksquare$ 71) connection to the INU Control Center, a certificate (self-signed/CA/PKCS#12) is required. If you delete the corresponding certificate, the INU Control Center can no longer be reached.

In this case restart the INU server  $\Rightarrow$   $\blacksquare$ 98. The INU server then generates a new selfsigned certificate with which a secured connection can be established.

- ✓ A certificate is installed on the INU server.
- 1. Start the INU Control Center.
- 2. Select **SECURITY Certificates**.
- 3. Delete the certificate using the icon  $\mathbf{X}$ .
- → The certificate is deleted.

## 6.7 How to Configure Network Authentication (IEEE 802.1X)

Authentication is the proof and verification of an identity. With it your network is protected from abuse, because only authorized devices have access.

The INU supports authentication according to the IEEE 802.1X standard which is based on EAP (Extensible Authentication Protocol).

If you use authentication according to IEEE 802.1X in your network, the INU server can participate:

## **Configuring EAP-MD5**

EAP-MD5 (Message Digest #5) is a user-based authentication via a RADIUS server. First, you have to create a user (user name and password) on the RADIUS server for the INU server. Afterwards you set up EAP-MD5 on the INU server.

- ✓ A user account for the INU server is set up on the RADIUS server.
- Start the INU Control Center.
- Select SECURITY Authentication.
- 3. From the Authentication method list, select MD5.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- Click Save & Restart to confirm.
- → The settings will be saved.

## **Configuring EAP-TLS**

EAP-TLS (Transport Layer Security) is a mutual, certificate based authentication via a RADIUS server. In this method, INU server and RADIUS server exchange certificates through an encrypted TLS connection.

Both RADIUS and INU server require a valid, digital certificate signed by a CA. This requires a PKI (Public Key Infrastructure).



#### WARNING

Follow the instructions below in the given order. If you do not follow the order, the INU server might not be reachable in the network.

In this case, reset the parameters of the INU serve ⇒ 🖺 95.

- 1. Create a certificate request on the INU server  $\Rightarrow$   $\square$ 75.
- 2. Create a certificate using the certificate request and the authentication server.
- 3. Install the requested certificate on the INU server  $\Rightarrow$  275.
- 5. Start the INU Control Center.
- 6. Select SECURITY Authentication.
- 7. Select **TLS** from the **Authentication method** list.
- 8. From the **EAP root certificate** list, select the root CA certificate.
- 9. Click Save & Restart to confirm.
- → The settings will be saved.

## **Configuring EAP-TTLS**

In EAP-TTLS (Tunneled Transport Layer Security), a TLS-protected tunnel is used for exchanging secrets. The method consists of two phases:

- 1. Outer authentication: An encrypted TLS (Transport Layer Security) tunnel is created between INU server and RADIUS server. To do this, the RADIUS server authenticates itself to the INU server using a certificate that was signed by a CA.
- 2. Inner authentication: In the tunnel the authentication (via CHAP, PAP, MS-CHAP, or MS-CHAPv2) takes place.
- ✓ A user account for the INU server is set up on the RADIUS server.
- ✓ For increased security during connection establishment (optional): The root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the INU server ⇒ 

  10.15
- 1. Start the INU Control Center.
- Select SECURITY Authentication.
- 3. Select TTLS from the Authentication method list.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- 5. Select the settings which secure the communication in the TLS channel.
- 6. Increase the security during connection establishment (optional): From the list **EAP root certificate**, select the root CA certificate.
- 7. Click Save & Restart to confirm.
- → The settings will be saved.

## **Configuring PEAP**

With PEAP (Protected Extensible Authentication Protocol), an encrypted TLS (Transport Layer Security) tunnel is established between the INU server and the RADIUS server. To do this, the RADIUS server authenticates itself to the INU server using a certificate that was signed by a CA. The TLS channel is then used to establish another connection that can be protected by means of additional EAP authentication methods (e.g. MSCHAPv2).

- ✓ A user account for the INU server is set up on the RADIUS server.
- ✓ For increased security during connection establishment (optional): The root CA certificate of the certification authority that has issued the certificate of the authentication server (RADIUS) is installed in the INU server ⇒ 

  10.15
- 1. Start the INU Control Center.
- Select SECURITY Authentication.
- 3. Select **PEAP** from the **Authentication method** list.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server.
- 5. Select the settings which secure the communication in the TLS channel.
- 6. Increase the security during connection establishment (optional): From the list **EAP root certificate**, select the root CA certificate.
- 7. Click Save & Restart to confirm.
- → The settings will be saved.

## **Configuring EAP-FAST**

EAP-FAST (Flexible Authentication via Secure Tunneling) is a specific EAP method developed by the company Cisco.

As with EAP-TTLS ( $\Rightarrow B81$ ) and PEAP ( $\Rightarrow B81$ ) a secure tunnel protects data transmission. However, the server does not authenticate itself with a certificate. Instead it uses PACs (Protected Access Credentials).

- ✓ A user account for the INU server is set up on the RADIUS server.
- 1. Start the INU Control Center.
- 2. Select **SECURITY Authentication**.
- 3. Select **FAST** from the **Authentication method** list.
- 4. Enter the user name and the password of the user account that is set up for the INU server on the RADIUS server
- 5. Select the settings intended to secure the communication in the channel.
- 6. Click Save & Restart to confirm.
- $\rightarrow$  The settings will be saved.

## 6.8 How to Assign a Name to a USB Port

By default, the names of the connected USB devices are displayed on the USB ports in the INU Control Center and SEH UTN Manager. These names are specified by the device manufacturers and might be ambiguous or inaccurate.

That is why you can assign freely definable names to the USB ports, e.g. the name of a corresponding software. This gives you a better overview of the USB devices available in the network.

- 1. Start the INU Control Center.
- 2. Select SECURITY USB.
- 3. Enter a name for the desired USB port in the **Name** box.
- 4. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.

## 6.9 How to Control Access to USB Devices

You can restrict the access to the USB ports and the connected USB devices:

- USB port key control: Up to two keys are defined for the USB port. Each key can be assigned a validity period
  (always, expiration date, weekly period). The USB port and the connected USB device are shown in the SEH
  UTN Manager greyed out, i.e. the connection cannot be established. As soon as the key for the USB port is entered in the SEH UTN Manager, the USB port and the connected USB device appear and can be used.SEH
- USB port device assignment: A certain USB device is assigned to a USB port. This is achieved by linking the USB port and USB device through the vendor ID (short VID) and product ID (short PID) of the USB device. The combination of VID and PID is specific to a certain USB device model which means that only USB devices of this specific model can be used on the USB port. This way you can assure, that (security) settings cannot be circumvented by connecting USB devices to other ports.



Power off unused ports to increase security  $\Rightarrow$  \( \begin{aligned} \Begin{ali

You can either use one of the two security methods, or both in combination.

## **Setting Up USB Port Keys**

The USB port keys are defined in the INU Control Center.

- 1. Start the INU Control Center.
- Select SECURITY USB.
- In the USB port table for the desired USB port, click the Change icon.
   The USB Port page appears.
- 4. Go to the **Method** list and click **Port key control**.
- 5. For **Key 1**, click the **Generate** button, or enter a freely definable key in the box (max. 64 ASCII characters).
- 6. Select a period from the **Validity** list and define the time window if necessary:
  - off (always invalid, use 'off' if you want to keep the key but temporarily disable it)
  - always (permanently valid)
  - expires on (valid until hour X on day Z)
  - weekly (valid on X days from hour Y to Z)
- 7. Optional: For **Key 2**, repeat steps 5. and 6.
- 8. To confirm, click Save.
- → The settings will be saved. Access to the USB device is protected.



To deactivate the feature, go to the **Method** list and select ---.

## **Entering a USB Port Key (Unlocking a USB Device)**

When USB port key control is enabled in the SEH UTN Manager, neither the USB port nor the connected USB device are shown, which means the connection cannot be established.

To gain access to the protected USB device, the key must be entered on the client in the SEH UTN Manager. Since the port key applies only to the user account currently in use on the client, you must enter it into each client user account that should have access to the USB device (user port key). The USB port and the connected USB device will then appear and can be used.

- 1. Start the SEH UTN Manager.
- 2. In the selection list, select the INU server.
- 3. In the menu bar, select **UTN Server Set User Port Keys**. The **Enter User Port Key** dialog appears.
- 4. Enter the key for the relevant USB port.
- 5. Click OK.
- → Access is granted.



## **Important:**

If you are using Auto-Connect (▷ 🖺 29) in combination with USB port keys, you must enter the key separately as the Auto-Connect port key. These apply systemwide.

In the menu bar, select UTN Server – Enter Auto-Connect Port Key.

## **Configuring USB Port Device Mapping**

- 1. Start the INU Control Center.
- 2. Select **SECURITY USB**.
- 3. In the USB port table for the desired USB port, click the **Change** icon. The **USB Port** page appears.
- 4. Go to the **Method** list and click **Device Assignment**.
- 5. Click **Assign device**.
  - The **USB device** box shows the VID and PID of the USB device.
- 6. To confirm, click **Save**.
- → The settings will be saved. Only the assigned USB device model can be operated on the USB port.



To deactivate the feature, go to the **Method** list and select ---.

To assign a different USB device to the USB port, connect the USB device to the USB port and repeat the USB port device mapping.

## **Configuring USB Port Keys in Combination with USB Port Device Mapping**

Combine the USB port key control and USB port device mapping security methods to use only the USB devices of the assigned USB device model on the USB port and further restrict access to them (over time periods).

- 1. Start the INU Control Center.
- Select SECURITY USB.
- 3. In the USB port table for the desired USB port, click the **Change** icon. The **USB Port** page appears.
- 4. Go to the Method list and click Port key control/Device mapping.
- 5. For **Key 1**, click the **Generate** button, or enter a freely definable key in the box (max. 64 ASCII characters).

- 6. Select a period from the **Validity** list and define the time window if necessary:
  - off (always invalid, use 'off' if you want to keep the key but temporarily disable it)
  - always (permanently valid)
  - expires on (valid until hour X on day Z)
  - weekly (valid on X days from hour Y to Z)
- 7. Optional: For **Key 2**, repeat steps 5. and 6.
- 8. Click **Assign device**.

The **USB device** box shows the VID and PID of the USB device.

- 9. To confirm, click **Save**.
- $\rightarrow$  The settings will be saved.



To deactivate the feature, go to the **Method** list and select ---.

# 6.10 How to hide protected USB devices in the SEH UTN Manager selection list?

You can restrict the access to the USB ports and the connected USB devices with the USB port key control, see 'How to Control Access to USB Devices'  $\Rightarrow$   $\triangleq$ 84. By default, USB devices that are protected by a port key are displayed in the selection list of the SEH UTN Manager without being accessible.

In addition, you can hide the protected USB devices so that they are not displayed in the selection list of the SEH UTN Manager. Proceed as follows:

- 1. Start the INU Control Center.
- 2. Select SECURITY USB.
- 3. Click Hide protected USB devices.
- 4. Click **Save** to confirm.
- $\rightarrow$  The settings will be saved.

## 6.11 How to Block USB Device Types

USB devices are grouped into classes according to their function. For example, input devices such as keyboards belong to the group 'Human Interface Device' (HID).

USB devices may present themselves as HID class USB devices while they are actually used for abuse (known as 'BadUSB').

In order to protect the INU server, you can block input devices of the HID class.

- 1. Start the INU Control Center.
- 2. Select SECURITY USB.
- 3. Click/clear Disable input devices (HID class).
- 4. To confirm, click **Save**.
- → The setting will be saved.

Additionally, there is a selection that enables or disables all input devices (HID class) on the ports.

- 1. Start the INU Control Center.
- 2. Select SECURITY USB.
- 3. Select **Disable input devices (HID class) for all ports** or **Enable input devices (HID class) for all ports**.
- 4. To confirm, click **Save**.
- → The setting will be saved.

## 6.12 How to Disable a USB Port

By default all USB ports are active. You can deactivate (and re-activate ) the USB port by interrupting or restoring the power supply.

## Deactivate

- unused USB ports to ensure that unwanted USB devices cannot be connected to the network. (Deactivated USB ports cannot be seen in the SEH UTN Manager.)
- a USB port and re-activate it to restart the connected USB device if it is in an undefinable condition. (The USB device does not need to be removed and reconnected manually.)
- 1. Start the INU Control Center.
- Select SECURITY USB.
- 3. For the desired USB port, enable/disable the option in the column.
- 4. To confirm, click Save.
- → The USB port is disabled/enabled.

## 6.13 How to Encrypt the USB Connection

To secure the USB connections, encrypt the entire data transfer (user data, control data and protocol data) between the clients and the USB devices connected to the INU server.

The protocols SSL (Secure Sockets Layer) and its successor TLS (Transport Layer Security) are used for encryption. The encryption strength is defined via the encryption protocol and level  $\Rightarrow$   $\bigcirc$  69.



#### WARNING

The SEH UTN Manager does not support the encryption level **Low**. If you set up **Low** in combination with an encrypted USB connection, a connection cannot be established.

Use an encryption level as high as possible.

If connections are encrypted, client and INU server communicate over the encrypted UTN port. By default, that is port 9443. If the port is already in use on your network, e.g. for another application, you can change the port number ⇒ 158.

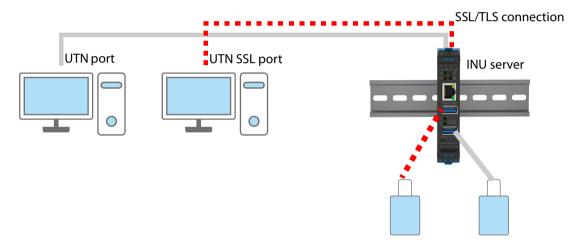


Figure 6.13-1: INU server – SSL/TLS connection in the network

- 1. Start the INU Control Center.
- Select SECURITY USB.
- 3. Enable the **Encrypt USB communication (SSL/TLS)** option.
- 4. To confirm, click **Save**.
- → The data transfer between the clients and the USB devices will be encrypted.

## 7 Maintance

You can maintain the INU server in the following ways:

- How to Perform a Device Software Update ⇒ 🗎 97

INU User Manual Windows Maintance

## 7.1 How to Backup Your Configuration

The INU server includes a backup function that allows you to access a fixed configuration state at any time. All parameters are saved in the '<default-name>\_parameters.txt' parameter file (exception: passwords). You can view this file on the INU server and save it to your local client for backup. You can edit the parameter values in the backed up file using a text editor . Afterwards, the edited file can be loaded onto one or more INU servers. The device(s) will then adopt the parameter values of the file. This allows you to quickly configure a large number of INU servers. You can find a detailed description of the parameters in the 'Parameter lists'  $\Rightarrow$  103.

### 1. Parameter file:

All parameters are saved in the '<default-name>\_parameters.txt' file (exception: passwords). You can view this file on the INU server and save it to your local client for backup. You can edit the parameter values in the backed up file using a text editor . Afterwards, the edited file can be loaded onto one or more INU servers. The device(s) will then adopt the parameter values of the file. This allows you to quickly configure a large number of INU servers. You can find a detailed description of the parameters in the 'Parameter lists'  $\Rightarrow$  100.

2. System backup: The entire system (settings, certificates, passwords, etc.) are saved to the SD card. By inserting the SD card in another INU server, you can transfer the system backup to this device. The system backup is automatically updated after a change to the configuration.



#### WARNING

If the SD card is lost or stolen, your environment becomes vulnerable (certificates, passwords).

Therefore, you have to take all necessary precautions to protect the INUserver if you use the automatic backup.

### See Parameter Values

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Backup.
- 3. In the **Parameter File Content** area, click the **View** button.
- → The current parameter values are displayed.

## **Exporting the Parameter File via INU Control Center**

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Backup.
- 3. In the **Parameter file Backup** area, click the **Export** button.
- 4. Save the '<default-name>\_parameters.txt' file to your client using your browser.
- → The parameters file is backed up.

## **Exporting the Parameter File via SEH Product Manager**

You can save the parameter file from one or more INU servers to your local client.

- ✓ The SEH Product Manager is installed on the client ⇒ 18.
- ✓ The device is shown in the device list  $\Rightarrow$  18.
- Start the SEH Product Manager.

The device list is displayed.

- 2. Select the INU server(s) in the device list.
- 3. In the menu bar, select **Device Backup**. The **Parameter backup** dialog appears.
- 4. Follow the instructions in the dialog.
- → The parameters are saved.

## Loading the Parameter File INU Control Center onto a INU Server

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Backup.
- 3. In the **Parameter file Restore** area, specify the '<default name>\_parameters.txt' file in the **Parameter file** box.
- 4. Click Import.
- → The INU server adopts the parameter values from the file.

## Loading the Parameter File via SEH Product Manager onto a INUServer

You can load the parameter file onto one or more INU servers.



#### **WARNING**

Some parameters (e.g. a static IPv4 network configuration) must be assigned individually. Conflicts can occur if you load the parameter file on multiple INU servers at the same time.

Only upload parameter files to multiple INU servers at the same time if the settings are universal.

- ✓ The SEH Product Manager is installed on the client ⇒ 18.
- ✓ The device is shown in the device list  $\Rightarrow$  18.
- 1. Start the SEH Product Manager. The device list is displayed.
- 2. Select the INU server(s) in the device list.
- 3. In the menu bar, select **Device Load parameter**. The **Load parameter** dialog appears.
- 4. Follow the instructions in the dialog.
- → The INU server adopts the parameter values from the file.

INU User Manual Windows Maintance

## **Automatic WebDAV System Backup**

System backup to a WebDAV server stores the INU server system in a directory on the WebDAV server. The system backup is automatically updated when you make changes to the system. To increase clarity on the WebDAV server, you can automatically create individual directories for days. All change backups from a single day are then stored in a subdirectory of the backup directory.

In addition to the change backup, you can also save an additional daily system backup. This single backup is stored on the WebDAV server every day at a time you specify.

- ✓ A WebDAV server is available on your network.
- ✓ A directory for system backup has been created on the WebDAV server.
- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Backup.
- 3. In the **System Backup WebDAV** area, enable the **Change Backup** option.
- 4. In the **System Backup WebDAV** area, enter the directory on the WebDAV server where the backup files are to be stored in the **Server Directory** box.
  - (Also defines the WebDAV server directory for manual system backup ⇒ 194.)
- 5. Optional: In the System Backup WebDAV area, enable the Individual Directories for Days option.
- 6. Optional: In the **System Backup WebDAV** area, enable the **Additional Individual Backups** option and specify the desired time.
- 7. To confirm, click Save.
- $\rightarrow$  The setting will be saved.

## **Manual WebDAV System Backup**

You can manually backup the current system state to the WebDAV server.

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Backup.
- In the System Backup WebDAV area, enter the directory on the WebDAV server where the backup file is to be stored in the Server Directory box.
  - (Also defines the WebDAV server directory for automatic system backup  $\Rightarrow 103$ .)
- 4. In the **System Backup WebDAV** area, click the **Create manual backup now** button.
- → The system backup is saved to the WebDAV server.

## **Automatic Backup**

- ✓ An SD card is connected to the INU server.
- ✓ The SD card has the file system FAT12, FAT16 or FAT32.
- ✓ 1 MB of free space is available on the SD card.

(These requirements are fulfilled ex factory.)

- 1. Start the INU Control Center.
- 2. Select MAINTENANCE Backup.
- 3. In the **System Backup SD Card** area, enable the **Parameter Backup** option.
- 4. Click Save.
- → The settings will be saved.

## 7.2 How to Reset Parameters to their Default Values

You can reset the INU to its default values, e.g. if you want to install the INU server in a different network. All settings will be set to factory settings. Installed certificates will not be deleted.



## **Important:**

The connection to the INU Control Center may be interrupted if the IP address of the INU server changes with the reset.

If required, determine the new IP address ⇒ 🖺 43.

You can change the settings either via remote access (INU Control Center and SEH Product Manager) or using the Reset button on the INU server.



If you lost the password for the INU Control Center, you can reset the INU server using the reset button. You do not need a password to do so.



## WARNING

dongleserver ProMAXRemove the SD card from the INU server before resetting the parameters. Otherwise, the INU server will adopt the parameter values stored on it (automatic backup  $\Rightarrow \bigcirc 92$ ).

## **Resetting Parameters from the INU Control Center**

- Start the INU Control Center.
- 2. Select MAINTENANCE Default settings.
- 3. Click Reset device.
  - A security query appears.
- 4. Confirm the security query.
- → The parameters are reset.

## **Resetting Parameters from the SEH Product Manager**

The SEH Product Manager allows you to reset one or more INU servers.

- ✓ The SEH Product Manager is installed on the client ⇒ 18.
- ✓ The device is shown in the device list  $\Rightarrow$  18.
- 1. Start the SEH Product Manager.
- 2. In the device list, select the INU server.
- 3. In the menu bar, select **Device Reset**. The **Reset** dialog appears.
- 4. Click **Reset**.
- → The parameters are reset.

## **Resetting Parameters via Reset Button**

With the reset button you can reset the INU server's parameter values to their default settings.

INU User Manual Windows Maintance

- 1. Press the reset button for 5 seconds. The INU server restarts.
- $\hookrightarrow$  The parameters are reset.

## 7.3 How to Perform a Device Software Update

You can update your INU server with a software update. Software updates include new features and/or bug fixes. You can find the version number of the software currently installed on the INU server on the start page of the INU Control Center or in the device list in the SEH Product Manager.

Visit the SEH Computertechnik GmbH website for current software files:

https://www.seh-technology.com/us/services/downloads/industrial/inu-100.html





## **Important:**

Save your current settings with a parameter backup before you upgrade. A backup is the best way to preserve all configuration settings in the event of a downgrade.

Only the software in use is updated; settings will remain preserved.



## **Important:**

Every update file comes with a 'readme' file. Read the 'readme' file and follow its instructions.

## **Update via INU Control Center**

- 2. Start the INU Control Center.
- 3. Select MAINTENANCE Update.
- 4. Specify the update file in the **Update file** box.
- 5. Click **Install**.
- → The update is executed. Afterwards, the INU server restarts.

## **Update via SEH Product Manager**

You can use the SEH Product Manager to update one or more INU servers.

- ✓ The SEH Product Manager is installed on the client  $\Rightarrow$  \(\begin{aligned}
  \text{18}\).
- ✓ The device is shown in the device list  $\Rightarrow$  18.
- 1. Start the SEH Product Manager.
  - The device list is displayed.
- 2. Select the INU server(s) in the device list.
- 3. In the menu bar, select **Device Load software**. The dialog **Load software** appears.
- 4. Follow the instructions in the dialog.
- → The update is executed. Afterwards, the INU servers restart.

INU User Manual Windows Maintance

## 7.4 How to Restart the INU Server

After some parameter changes or after an update, the INU server restarts automatically. If the INU server is in an undefined state, you can also restart the INU server manually.

- Restarting the INU Server via Reset Button ⇒ 198

## Restarting the INU Server from the INU Control Center

- Start the INU Control Center.
- 2. Select MAINTENANCE Restart.
- 3. Click Restart device.
- → The INU server restarts.

## Restarting the INU Server from the SEH Product Manager

You can use the SEH Product Manager to restart one or more INU servers.

- ✓ The SEH Product Manager is installed on the client ⇒ 18.
- ✓ The device is shown in the device list  $\Rightarrow$   $\blacksquare$ 18.
- 1. Start the SEH Product Manager.
- 2. Select the INU server(s) in the device list.
- 3. In the menu bar, select **Device Restart**. The **Restart** dialog appears.
- 4. Click Restart.
- → The INU servers will be restarted.

## **Restarting the INU Server via Reset Button**

- 1. Press the restart button of the device for a short time.
- → The INU server restarts.

## 8 Appendix

The appendix contains a glossary, a troubleshooting guide and the lists of this document.

- Glossary ⇒ 🖺 100
- Troubleshooting 

  □ 101
- SEH UTN Manager Feature Overview 

  □ 124

INU User Manual Windows Appendix

## 8.1 Glossary

## **Compound USB device**

A compound USB device consists of a hub and one or more USB devices that are all integrated into a single housing. Dongles are often compound USB devices.

If a compound USB device is connected to a USB port of the INU server, all integrated USB devices will be shown in the INU Control Center and in the selection list of the SEH UTN Manager. When the port connection is activated, all displayed USB devices will be connected to the user's client. It is not possible to activate a port connection to only one of the USB devices.

#### **Default name**

Device name which is assigned by the manufacturer and cannot be changed. If you are using several identical INU servers, you can identify a certain device with it.

The default name of the INU server is made up of the two letters 'IC' and the device number. The device number consists of the last six numbers of the MAC address.

You can read the default name in the INU Control Center or SEH Product Manager.

#### **INU Control Center**

The INU Control Center is the UI of the INU server. The INU server can be configured, monitored and maintained using the INU Control Center.

 
You can access the INU Control Center with an Internet browser (e.g. Microsoft Edge).

More information  $\Rightarrow 11$ .

## **MAC** address

The MAC address (often also Ethernet address, physical or hardware address) is a globally unique identifier of a network adapter. If you are using several identical INU servers, you can identify a certain device with it.

The manufacturer defines the MAC address in the hardware of the device. It consists of 12 hexadecimal numbers. The first six numbers represent the manufacturer, while the last six numbers identify the individual device. The characters for separating the numbers depend on the platform. Under Windows, '-' are used.



Manufacturer ID Device number

You can read the MAC address on the type plate on the housing, in the SEH UTN Manager, or in the SEH Product Manager.

## **SEH Product Manager**

The SEH Product Manager is a software tool developed by SEH Computertechnik GmbH for the administration and management of SEH Computertechnik GmbH devices. Depending on the device, various actions can be performed.

More information  $\Rightarrow$  18.

## **SEH UTN Manager**

The 'SEH UTN Manager' is a software tool developed by SEH Computertechnik GmbH . The SEH UTN Manager is used to establish and manage connections to the USB devices connected to the INU servers.

More information  $\Rightarrow 13$ .

INU User Manual Windows Appendix

## 8.2 Troubleshooting



The SEH Computertechnik GmbH website contains our Knowledge Base articles that provide solutions and detailed background knowledge addressing specific problems and questions.

https://www.seh-technology.com/services/knowledgebase.html

Fault	Cause	Fix
Lost password and/or user name for the user accounts.		Reset the INU server parameter values to the default ⇒ 🖺 95.  WARNING  Resetting the device causes all settings to be lost.
INU Control Center can not be reached.	<ul> <li>Faulty cable connections</li> <li>Wrong IP address used</li> <li>Browser proxy settings</li> <li>Access is protected via SSL/TLS (HTTPS) and the security settings are not supported ⇒ 171</li> <li>TCP port access control is enabled (ports are blocked) ⇒ 174</li> </ul>	<ul> <li>Check the         <ul> <li>Cabling</li> <li>Settings</li> </ul> </li> <li>Reset the INU server parameter values to the default ⇒ ₱95.</li> <li>WARNING         <ul> <li>Resetting the device causes all settings to be lost.</li> </ul> </li> </ul>
Functions are grayed out or unavailable in the SEH UTN Manager.	Which features are inactive (grayed out) in the SEH UTN Manager depends on different factors:  • Selection list mode  • global  • user  • Client user account  • administrator  • standard user  • Write access to the *.ini file (selection list)  • The connected USB device does not support the function  • Security measures have been implemented	<ul> <li>Consult your administrator.</li> <li>Start the SEH UTN Manager with a different user account.</li> <li>Check the configured security measures.</li> </ul>

Fault	Cause	Fix
USB devices are not shown in the SEH UTN Manager	<ul> <li>The USB device is no longer connected to the INU server.</li> <li>The SEH UTN Manager and the INU server firmware/software are incompatible.</li> <li>The USB port is deactivated.</li> <li>Too many compound USB devices are connected to the INU server. The number of virtual ports has been exceeded ⇒</li></ul>	<ul> <li>Check if the USB device is connected.</li> <li>Update the SEH UTN Manager (⇒ ■97) and the software (⇒ ■97).</li> <li>Switch on the USB port power supply ⇒ ■89.</li> <li>Remove compound USB devices to free up virtual ports.</li> </ul>
The SEH UTN Manager displays several USB devices on one USB port.	The USB device is a compound USB device. It consists of a hub and one or more USB devices that are all integrated into a single housing. When the connection to the port is established, all the displayed USB devices are connected.	_
The connection to the USB port (and the connected USB device) cannot be established in the SEH UTN Manager.	<ul> <li>The USB port is already connected to another client (in use by another user).</li> <li>The driver software for the USB device is not installed on the client.</li> <li>Access to USB devices is restricted.</li> </ul>	<ul> <li>Install the USB device driver on the client, e.g. by connecting the USB</li> </ul>
<ul> <li>The connection between the SEH UTN Manager and the INU server cannot be established:</li> <li>The INU server does not appear in the SEH UTN Manager.</li> <li>The INU server is grayed out in the SEH UTN Manager.</li> </ul>	<ul> <li>The UTN port is blocked, e.g. by security software (firewall).</li> <li>The UTN port is not identical (you changed the port number).</li> </ul>	<ul> <li>Enable communication through the UTN port on your network.</li> <li>SNMPv1, which is required to forward the port change to the clients, is disabled. Enable SNMPv1 ⇒</li></ul>

INU User Manual Windows Appendix

## 8.3 Parameter lists

The INU servers stores its configuration as parameters. You directly use parameters for:

- Administration via email ⇒ 20

The following tables list all parameters and their values so that you can use them in the actions named above.

- Table 8.3-1 'Parameter list IPv4' ⇒ ₱104
- Table 8.3-3 'Parameter list IP-VLAN' ⇒ 

  105

- Table 8.3-7 'Parameter list Bonjour' ⇒ 🖺 109

- Table 8.3-11 'Parameter list UTN port' ⇒ 🖺 110

- Table 8.3-19 'Parameter list USB' ⇒ 

  120

Table 8.3-1: Parameter list – IPv4

Parameters	Value	Default	Description
ip_addr [IP address]	valid IP address	169.254.0.0/ 16	IP address of the INU server.
ip_pfxlen (Prefix length]	valid IP address	255.255.0.0	The IP address and the prefix length defines the network mask of the INU server.
			Subnet masks are used to logically partition big networks into subnetworks. If you are using the INU server in a subnetwork, it requires the subnet mask of the subnetwork.
ip_router [Router]	valid IP address	0.0.0.0	IP address of the network's standard router which the INU server uses.
			With a router, you can address IP addresses from other networks.
ip_dhcp	on/off	on	Enables/disables the DHCP protocol.
[DHCP]			If DHCP is enabled in your network, IPv4 network configuration (IP address, subnet mask, gateway, DNS) is automatic.
ip_auto [ARP/PING]	on/off	on	Enables/disables the ARP/PING protocol.  You can use the commands ARP and PING to change an IP address. The implementation depends on your system; read the documentation of your operating system.



We recommend deactivating **DHCP**, BOOTP and **ARP/PING** as soon as the INU server has been assigned with an IP address.

Table 8.3-2: Parameter list – IPv6

Table 0.5 2. Talameter list in vo			
Parameters	Value	Default	Description
ipv6 [IPv6]	on/off	on	Enables/disables the IPv6 functionality of the INU server.
ipv6_auto [Automatic configuration]	on/off	on	Enables/disables the automatic assignment of the IPv6 address to the INU server.
ipv6_addr [IPv6 address]	n:n:n:n:n:n:n	::	Defines an IPv6 unicast address in the format n:n:n:n:n:n:n which is manually assigned to the INU server.
			<ul> <li>Every 'n' represents the hexadecimal value of one of the eight 16 bit elements of the ad- dress.</li> </ul>
			<ul> <li>Leading zeros can be omitted.</li> </ul>
			<ul> <li>An IPv6 address may be entered or displayed using a shortened version when successive fields contain all zeros (0). In this case, two colons (::) are used.</li> </ul>

Parameters	Value	Default	Description
ipv6_router [Router]	n:n:n:n:n:n:n	::	Manually defines a static router to which the INU server sends its requests.
·b · o_b · · · · ·	0-64 [1–2 characters; 0–	64	Defines the length of the subnet prefix for the IPv6 address. The value 64 is preset.
- J -	9]		Address ranges (e.g. your network) are specified with prefixes. To do this, the prefix length (number of bits used) is added to the IPv6 address as a decimal number and the decimal number is preceded by '/'.

Table 8.3-3: Parameter list – IP-VLAN

Table 8.3-3:	Parameter list – IP-VLAN		
Parameters	Value	Default	Description
iplan_mgmt [IP management	on/off	off	Enables/disables the forwarding of IP manage- ment VLAN data.
VLAN]			If this option is enabled, SNMP is only available in the IP management VLAN.
ipvlan_mgmt_idx [VLAN-ID]	0-4096 [1–4 characters; 0- 9]	0	ID for the identification of the IP management VLAN.
ipvlan_mgmt_an [Access from any	y on/off	off	Enables/disables the administrative access (web) to the INU server via IPv4 client VLANs.
VLAN]			If this option is enabled, the INU server can be administrated via all VLANs.
ipvlan_mgmt_un [Access via LAN	tag on/off	on	Enables/disables the administrative access to the INU server via IP packets without tag.
(untagged)]			If this option is disabled, the INU server can only be administrated via VLANs.
ipvlan_on_1 ~ ipvlan_on_20 [VLAN]	on/off	off	Enables/disables the forwarding of IP client VLAN data.
ipvlan_addr_1 ~ ipvlan_addr_20 [IP address]	valid IP address	192.168.0.0	IP address of the INU server within the IP client VLAN.
ipvlan_mask_1 ~ ipvlan_mask_20 [Prefix length]	valid IP address	255.255.255. 0	Subnet mask of the INU server within the IP client VLAN.

Parameters	Value	Default	Description
ipvlan_router_1 ~ ipvlan_router_20 [Router]	valid IP address	0.0.0.0	IP router address in the IP management VLAN. With a router, you can address IP addresses from other networks.
ipvlan_id_1 ~ ipvlan_id_20 [VLAN-ID]	0-4096 [1–4 characters; 0– 9]	0	ID for the identification of the IP client VLAN.
utn_2vlan_1 ~ utn_2vlan_20 [Allocate VLAN]	0-9 [1 character; 0–9]	0	Allocates a VLAN to the USB port.  0 = any 1 = VLAN 1 2 = VLAN 2 usw. 9 = none

Table 8.3-4: Parameter list – DNS

Parameters	Value	Default	Description	
dns [DNS]	on/off	on	Enables/disables the name resolution via a DNS server.	
dns_domain [Domain name]	max. 255 characters [a–z, A–Z, 0–9]	[blank]	Defines the IP address of the primary DNS server.	
dns_primary [Primary DNS server]	valid IP address	0.0.0.0	Defines the IP address of the secondary DNS server.	
·			The secondary DNS server is used if the first one is not available.	
dns_secondary [Secondary DNS server]	valid IP address	0.0.0.0	Defines the domain name of an existing DNS server.	
dns_1st4 [Preferred address typ]	on/off	on	Specifies which address type is used after the IP address is returned from the DNS server. (This option is only relevant if "IPv4 and IPv6" is enabled.)	
			on = IPv4 is preferred	
			off = IPv6 is preferred	

Table 8.3-5: Parameter list – POP3

Parameters	Value	Default	Description
pop3	on/off	off	Enables/disables the POP3 functionality.
[POP3]			

Parameters	Value	Default	Description
pop3_srv [Server address]	max. 128 characters	[blank]	Defines the POP3 server via its IP address or host name.  A host name can only be used if a DNS server (□
pop3_port [Server port]	1-65535 [1–5 characters; 0– 9]	110	<ul> <li>□43) was configured beforehand.</li> <li>Defines the port which the INU server uses to receive emails.</li> <li>The default port number for POP3 is 110. The default port number for SSL/TLS (parameter 'POP3 – Security' ⇒ □50) is 995. If required, read the documentation of your POP3 server.</li> </ul>
pop3_sec [Security]	0-2 [1 character; 0–2]	0	<ul> <li>Defines the authentication method to be used:</li> <li>APOP: encrypts the password when logging on to the POP3 server.</li> <li>SSL/TLS: encrypts the entire communication with the POP3 server. The encryption strength is defined via the encryption protocol and level ⇒ ■69.</li> <li>0 = no security</li> <li>1 = APOP</li> <li>2 = SSL/TLS</li> </ul>
pop3_poll [Check mail every]	1-10080 [1–5 characters; 0– 9]	2	Defines the time interval (in minutes) which with the POP3 server is checked for emails.
pop3_limit [Ignore mail exceed- ing]	0-4096 [1–4 characters; 0– 9]	4096	Defines the maximum email size (in Kbyte) to be accepted by the INU server.  0 = unlimited
pop3_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the INU server to log on to the POP3 server.
pop3_pwd [Password]	max. 128 characters	[blank]	Defines the user password used by the INU server to log on to the POP3 server.

Table 8.3-6: Parameter list – SMTP

Parameters	Value	Default	Description
smtp_srv [Server address]	max. 128 characters	[blank]	Defines the SMTP server via its IP address or host name.
- ·			A host name can only be used if a DNS server (⇒

Parameters	Value	Default	Description
smtp_port [Server port]	1-65535 [1–5 characters; 0–	25	Defines the port which the INU server and SMTP server use to communicate.
	9]		The default port number for SMTP is 25. For SSL/TLS (parameter 'SMTP – SSL/TLS' ⇒ 151), SMTP servers use by default port 587 (STARTSSL/STARTTLS) or the old port 465 (SMTPS). If required, read the documentation of your SMTP server.
smtp_ssl	on/off	off	Enables/disables SSL/TLS.
[SSL/TLS]			SSL/TLS encrypts the communication from the INU to the SMTP server. The encryption strength is defined via the encryption protocol and level ⇒ ■69.
smtp_sender [Sender name]	max. 128 characters	[blank]	Defines the email address used by the INU server to send emails.
			Very often the name of the sender and the email account user name are identical.
smtp_auth [Login]	on/off	off	Enables/disables SNMP authentication. To send emails, the INU sends its user name and password to the SMTP server to authenticate itself. Enter user name (parameter 'SMTP – User name' ⇒ ■51) and password (parameter 'SMTP – Password' ⇒ ■51).
			Some SMTP servers require SMTP authentication to prevent fraudulent use (spam).
smtp_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the INU server to log on to the SMTP server.
smtp_pwd [Password]	max. 128 characters	[blank]	Defines the password used by the INU server to log on to the SMTP server.
smtp_sign [Security (S/MIME)]	on/off	off	Enables/disables signing email using S/MIME (Secure/Multipurpose Internet Mail Extensions). A signature created by the sender allows the recipient to verify the identity of the sender and to make sure that the email was not modified. All S/MIME security features require an S/MIME certificate
smtp_attpkey [Attach public key]	on/off	on	Sends the public key together with the email.  Many email clients require the key to display the email.
smtp_encrypt [Encrypt]	on/off	off	Enables the encryption of emails. Only the intended recipient can open and read the encrypted email.

Table 8.3-7: Parameter list – Bonjour

Parameters	Value	Default	Description
bonjour [Bonjour]	on/off	on	Enables/disables Bonjour.
bonjour_name [Bonjour name]	max. 64 characters [a-z, A-Z, 0-9]	[Default name]	Defines the Bonjour name of the INU server.  The INU server uses this name to announce its Bonjour services. If no Bonjour name is entered, a default name will be used (device name@ICxxxxxxx).

Table 8.3-8: Parameter list – Server services

table 6.5 6. Talameter list – Server services				
Parameters	Value	Default	Description	
wdav_on [WebDAV]	on/off	off	Enables/disables the WebDAV functionality of the INU server	
wdav_url [Server address]	max. 128 characters	[blank]	Defines a WebDAV server by its IP address or host name.  A host name can only be used if a DNS server (⇒   ■43) was configured beforehand.	
wdav_usr [User name]	max. 128 characters	[blank]	Defines the user name used by the INU server to log on to the WebDAV server.	
wdav_pwd [Password]	max. 128 characters	[blank]	Defines the password used by the INU server to log on to the WebDAV server.	
wdav_ssl [SSL/TLS]	on/off	off	Enables/disables SSL/TLS encryption of communication between the INU server and WebDAV server.  The encryption strength is defined via the encryption protocol and level	
syslogng [Syslog-ng]	on/off	off	Enables/disables the syslog-ng functionality of the INU server.	
syslogng_srv [Server address]	max. 64 characters	[blank]	Defines a syslog-ng server by its IP address or host name.  A host name can only be used if a DNS server (⇒   ■43) was configured beforehand.	
syslogng_port [Server port]	1-65535 [1–5 characters; 0– 9]	514	Defines the port number used by the INU server to communicate with the syslog-ng server.  The port number 514 is preset.	
syslogng_ssl [SSL/TLS]	on/off	off	Enables/disables SSL/TLS encryption of communication between the INU server and syslog-ng server.  The encryption strength is defined via the encryption protocol and level	

Table 8.3-9: Parameter list – Description

Parameters	Value	Default	Description
sys_name [Host name]	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Device name as alternative to IP address. With a name you can identify the INU server more easily in the network, e.g. if you are using several INU servers.
			Displayed in the INU Control Center, the SEH UTN Manager and the SEH Product Manager.
sys_descr	max. 64 characters	[blank]	Device description, e.g. location or department.
[Description]	[a-z, A-Z, 0-9]		Displayed in the INU Control Center, the SEH UTN Manager and the SEH Product Manager.
sys_contact [Contact person]	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Contact person, e.g. device administrator. Is displayed in the INU Control Center.

Table 8.3-10: Parameter list – Date/Time

Parameters	Value	Default	Description
ntp [Date/Time]	on/off	on	Enables/disables the use of a time server (SNTP).
ntp_server [Time server]	max. 64 characters [a–z, A–Z, 0–9]	pool.ntp.org	Defines a time server by its IP address or host name.  A host name can only be used if a DNS server (□> □ 43) was configured beforehand.  Important:  If your network in configured accordingly, the INU server receives the time server settings automatically via DHCP. A time server assigned in such a manner always takes precedence over manual settings.
ntp_tzone [Time zone]	UTC, GMT, EST, EDT, CST, CDT, MST, MDT,	CET/CEST (EU)	Compensates Coordinated Universal Time (UTC) for location and national particularities (day-

Table 8.3-11: Parameter list – UTN port

PST, PDT, etc.

Parameters	Value	Default	Description	n
utn_port [UTN port]	1-9200 [1–4 characters; 0– 9]	9200	Defines the crypted co	e number of the UTN port for unen- nnections.  WARNING  The UTN port must not be blocked by security software (firewall).

light saving time etc.).

Parameters	Value	Default	Description	n
<u>_</u> 55. p 5.1 t	1-9443 [1–4 characters; 0– 9]	9443		e number of the UTN port for connections.  WARNING
				The encrypted UTN port must not be blocked by security software (firewall).

Table 8.3-12: Parameter list – Notification

Parameters	Value	Default	Description
mailto_1 mailto_2 [Email address]	valid email address [max. 64 characters]	[blank]	Email address of the recipient for notifications.
mailsub [Subject]	max. 64 characters [a–z, A–Z, 0–9, %P, %p, &%N, %H, %I, %M, %E, %D, %t]	%p %N: %E	Defines the content of the email subject line for notification and status emails.  %P = Product type %p = Model %N = Default name %H = Host name %I = IP address %M = MAC address %E = Event %D = Date %t = Time
noti_stat_1 noti_stat_2 [Status email]	on/off	off	Enables/disables the periodical sending of a status email to recipient 1 or 2.
notistat_d [Interval]	al su mo tu we th fr sa	al	Defines the day (the interval) on which a status email is sent.  al = daily su = Sunday mo = Monday tu = Tuesday we = Wednesday th = Thursday fr = Friday sa = Saturday
notistat_h [hh]	0-23 [1–2 characters; 0– 9]	0	Specifies the time (hour) at which a status email is sent.  1 = 1. hour  2 = 2. hour  3 = 3. hour etc.

Parameters	Value	Default	Description
notistat_tm [mm]	0-5 [1 character; 0–5]	0	Specifies the time (minute) at which a status email is sent.  0 = 00 min  1 = 10 min  2 = 20 min  3 = 30 min  4 = 40 min  5 = 50 min
notisys_1 notisys_2 [Send system informa- tion]	on/off	off	Enables/disables sending emails with system information (reboot, network connections, power supply, temperature warnings, etc.).
notiusb_1 notiusb_2 [Send USB port and USB device information]	on/off	off	Enables/disables sending emails with information about the USB port and connected USB devices (enable or disable a USB port, connect or remove a USB device, etc.)
notisdcard_1 notisdcard_2 [Send SD card informa- tion]	on/off	off	Enables/disables sending emails with SD card information (connect or remove an SD card, unusable SD card, etc.).
trapto_1 trapto_2 [Address]	valid IP address	0.0.0.0	SNMP trap address of the recipient.
trapcommu_1 trapcommu_2 [Community]	max. 64 characters [a–z, A–Z, 0–9]	public	SNMP trap community of the recipient.
trapversion_1 trapversion_2 [SNMP version]	 v1 v3		Defines the SNMP protocol version for SNMP trap sending = none v1 = SNMPv1 v3 = SNMPv3
trapsys [Send system information]	on/off	off	Enables/disables sending SNMP traps with system information (reboot, network connections, power supply, temperature warnings, etc.).
trapusb [Send USB port and USB device information]	on/off	off	Enables/disables sending SNMP traps with information about the USB port and connected USB devices (enable or disable a USB port, connect or remove a USB device, etc.)
trap_sdcard [Send SD card informa- tion]	on/off	off	Enables/disables sending SNMP traps with SD card information (connect or remove an SD card, unusable SD card, etc.).

Table 8.3-13: Parameter list – Monitoring

lable 8.3-13: Parameter list – Monitoring					
Parameters	Value	Default	Description		
monitoring [Monitoring]	on/off	off	Enables/disables the monitoring of system values, events and errors.		
wdav_monidir [Directory]	max. 128 characters	[blank]	Defines the directory on the WebDAV server where the monitoring logs are stored.		
wdav_monimdir [Create individual directories for days]	on/off	on	Enables/disables the creation of subdirectories to store monitoring logs for a single day.  Important:  The FIFO principle (first-in, first-out) is applied after one year. For example, 1 January of last year will overwritten with files from 1 January of the current year.		
wdav_monion [Continuous backup]	on/off	off	Enables/disables the regular backup of monitoring logs to the WebDAV server.  Important: The monitoring logs are divided into 2 MB files on the INU server. Once this size is reached, the file is stored on the WebDAV server.		
wdav_monidaily [Daily backup at]	on/off	off	Enables/disables daily storage of the monitoring logs on the WebDAV server.		
wdav_monihh [Daily backup at]	0-23	0	Defines the time at which the monitoring logs are stored daily on the WebDAV server.		
monimailto [Email address]	valid email address [max. 64 characters]	[blank]	Defines the email address of the recipient for sending monitoring logs.		
monimailsub [Email subject]	max. 64 characters [a–z, A–Z, 0–9, %P, %p, &%N, %H, %I, %M, %E, %D, %t]	%p: %N %E	Defines the content of the email subject line for monitoring log emails.  %P = Product type  %p = Model  %N = Default name  %H = Host name  %I = IP address  %M = MAC address  %E = Event  %D = Date  %t = Time		

Parameters	Value	Default	Description
monimail [Continuous backup]	on/off	off	Enables/disables the regular sending of monitoring logs as email.  Important: The monitoring logs are divided into 2 MB files on the INU server. Once this size is reached, the file is sent as an email attachment.
monimaildaily [Daily backup at]	on/off	off	Enables/disables the daily sending of the monitoring logs as email.
monimailhh [Daily backup at]	0-23	0	Defines the time at which the monitoring logs are sent daily by email.
syslogngdbg [Syslog-ng export]	on/off	off	Enables/disables the sending of monitoring information to a syslog-ng server.
syslogng_ietf [Format]	on/off	on	Defines the format for monitoring information sent by the INU server to the syslog-ng server: IETF (RFC 5424) or Legacy (RFC 3164/BSD).  on = IETF (RFC 5424)  off = Legacy (RFC 3164/BSD)

Table 8.3-14: Parameter list – SSL/TLS

Parameters	Value	Default	Description
sslmethod	any	any	Defines the encryption protocol for SSL/TLS
[Encryption protocol]	tls10		connections.
	tls11		any = at will (automatic negotiation)
	tls12		tls10 = TLS 1.0
	tls13		tls11 = TLS 1.1
			tls12 = TLS 1.2
			tls13 = TLS 1.3
			WARNING



Use TLS (and not SSL).

Parameters	Value	Default	Description
security [Encryption level]	1-4 [1 character; 1–4]	4	Defines the encryption level for SSL/TLS connections.  1 = low 2 = medium 3 = high 4 = any (automatic negotiation)  WARNING Current browsers do not support cipher suites from the Low level. If you use Low with a current browser and the setting HTTPS only for access to the INU Control Center (□ □71), a connection cannot be established.  Use an encryption level as high as possible.

Table 8.3-15: Parameter list – Control Center

	meter iist Control	center	
Parameters	Value	Default	Description
http_allowed [Connection]	on/off	on	Defines the connection type (HTTP/HTTPS) to be used for connecting to the INU Control Center.  on = HTTP/HTTPS off = HTTPS only The encryption strength is defined via the encryption protocol and level ⇒ ■69.  WARNING Current browsers do not support low security settings. With them a connection cannot be established.
			Do <u>not</u> use the following combina- tion: Encryption protocol <b>HTTPS</b> and encryption level <b>Low</b> .
			When the connection is estab- lished, the identity of the INU server is verified. For that, the client asks for the

certificate via the browser ( $\Rightarrow$   $\blacksquare$ 75). This certificate must be accepted by the browser; read the documentation of your browser software.

Parameters	Value	Default	Description
sessKeys [Restrict Control Center access]	on/off	off	Enables/disables the INU Control Center Control Center user accounts. If they are enabled, a login screen is displayed when opening the INU Control Center.
			Important:  Define user accounts (user names and passwords).
admin_name [Administrator – User	max. 64 characters [a-z, A-Z, 0-9]	admin	Defines the user name for the administrator user account.
name]			Important:  Also, this is the user name of the SNMPv3 admin account ⇒
admin_pwd [Administrator – Pass-	8–64 characters [a–z, A–Z, 0–9]	administrator	Defines the password for the administrator user account.
word]			Important:  Also, this is the password of the SNMPv3 admin account
any_name [Read-only user – User	max. 64 characters [a-z, A-Z, 0-9]	anonymous	Defines the user name for the read-only user account.
name]			Important:  Also, this is the user name of the SNMPv3 user account
any_pwd	max. 64 characters	[blank]	Defines the password for the read-only user
[Read-only user – Pass- word]	[a–z, A–Z, 0–9]		account.  Important:  Also, this is the password of the SNMPv3 user account
usb_Mg_name [USB Manager – User name]	max. 64 characters [a-z, A-Z, 0-9]	USB Manager	Defines the user name for the USB Manager account.
usb_Mg_pwd [USB Manager – Pass- word]	8–64 characters [a–z, A–Z, 0–9]	[blank]	Defines the user password for the read-only user account.
sessKeyUList [Login screen displays]	on/off	on	Defines the type of login screen.  on =shows a user list, only password must be entered  off = neutral login screen, user name and password must be entered
sessKeyTimer [Session timeout]	on/off	on	Enables/disables the session timeout.

Parameters	Value	Default	Description
sessKeyTimeout [Session timeout]	120-3600 [3–4 characters; 0– 9]	600	Time in seconds after which the timeout is to be effective.

Table 8.3-16: Parameter list – SNMP

Parameters	Value	Default	Description
snmpv1 [SNMPv1]	on/off	on	Enables/disables SNMPv1.
snmpv1_ronly [Read-only]	on/off	off	Enables/disables the write protection for the community.
snmpv1_community [Community]	max. 64 characters [a-z, A-Z, 0-9]	public	SNMP community name Enter the name as it is defined in the monitoring station.
,,	- , , , -		Important:



The default name is 'public'. This name is commonly used for read/write communities. We recommend to change it as soon as possible to increase security.

snmpv3 [SNMPv3]	on/off	on	Enables/disables SNMPv3.
any_hash [Hash]	md5 sha	md5	Specifies the hash algorithm for SNMP user group 1.
any_rights [Access rights]	readonly readwrite	readonly	Defines the access rights of the SNMP user group 1 = none
any_cipher [Encryption]	aes des		Defines the encryption method of the SNMP user group 1 = none
admin_hash [Hash]	md5 sha	md5	Specifies the hash algorithm for SNMP user group 2.
admin_rights [Access rights]	 readonly readwrite	readwrite	Defines the access rights of the SNMP user group 2 = none
admin_cipher [Encryption]	aes des		Defines the encryption method of the SNMP user group 2.



## Important:

The administrator user account and the read access user account are also used as SNMP user accounts (⇒ 123). Consider this when setting up user accounts.

Table 8.3-17: Parameter list – TCP port access

Table 6.5 17. Talameter list – Tell port access					
Parameters	Value	Default	Description		
protection [Port access control]	on/off	off	Enables/disables the blocking of selected ports and thus connections to the INU server.		
protection_level [Security level]	protec_utn protec_tcp	protec_utn	Specifies the port types to be blocked. protec_utn= UTN access (UTN ports)		
	protec_all		protec_tcp= TCP access (TCP ports: HTTP/ HTTPS, UTN)		
			protec_all= all ports (IP ports)		
<pre>ip_filter_on_1 ~ ip_filter_on_(max. Ports) [IP address]</pre>	on/off	off	Enables/disables an exception from port blocking.		
<pre>ip_filter_1 ~ ip_filter_(max. Ports) [IP address]</pre>	valid IP address	[blank]	Defines networks elements that are excluded from port blocking by their IP address.  The prefix notation " <ip address="">/<pre> length&gt;" can be used to freely define IPv4 and IPv6 subnets.</pre></ip>		
hw_filter_on_1 ~ hw_filter_on_8 [MAC address]	on/off	off	Enables/disables an exception from port blocking.		
hw_filter_1 ~ hw_filter_8 [MAC address]	Valid MAC address	00:00:00:00:0 0:00	Defines elements that are excluded from port blocking by their MAC address (MAC address)  Important:  MAC addresses are not delivered through routers!		

Parameters	Value	Default	Description
protection_test [Test mode]	on/off	on	Enables/disables the test mode.  WARNING  The test mode is active by default so that you can test your settings without locking yourself out. Your settings will be active until the INU is restarted, afterwards access is no longer restricted.  After you have successfully tested your settings, you have to deactivate the test mode so that access control is permanent.

Table 8.3-18: Parameter list – Authentication

Parameters	Value	Default	Description
auth_typ [Authentication method]	 MD5 TLS TTLS PEAP FAST		Defines an authentication method (according to IEEE 802.1X).  If you use an authentication method in your network, the INU server can participate.  =none  MD5 =EAP-MD5  TLS =EAP-TLS  TTLS =EAP-TTLS  PEAP =PEAP  FAST =EAP-FAST
auth_name [User name]  auth_pwd [Password]	max. 64 characters [a-z, A-Z, 0-9]  max. 64 characters [a-z, A-Z, 0-9]	[blank]	Defines the username of the INU server, as it is configured on the authentication server (RADIUS) for the EAP authentication methods MD5, TTLS, PEAP and FAST.  Defines the password with which the INU server is set up on the RADIUS server for the EAP authentication methods MD5, TTLS, PEAP, and
auth_intern [Inner authentication]	PAP CHAP MSCHAP2 EMD5 ETLS		Authentication methods MD5, TTLS, PEAP, and FAST.  Defines the kind of inner authentication for the EAP authentication methods TTLS, PEAP, and FAST.  = none PAP = PAP CHAP=CHAP MSCHAP2=MS-CHAPv2 EMD5=EAP-MD5 ETLS = EAP-TLS

Parameters	Value	Default	Description
auth_extern [PEAP/EAP-FAST options]	PLABELO PLABEL PVERO PVER1 FPROV1		Defines the kind of external authentication for the EAP authentication methods TTLS, PEAP, and FAST =none PLABEL0=PEAPLABEL0 PLABEL1=PEAPLABEL1 PVER0=PEAPVER0 PVER1=PEAPVER1 FPROV1=FASTPROV1
auth_ano_name [Anonymous name]	max. 64 characters [a–z, A–Z, 0–9]	[blank]	Defines the anonymous name for the unencrypted part of the EAP authentication methods TTLS, PEAP, and FAST.
auth_wpa_addon [WPA Add on]	max. 255 characters [a-z, A-Z, 0-9]	[blank]	Defines an optional WPA expansion for the EAP authentication methods TTLS, PEAP, and FAST.

Table 8.3-19: Parameter list – USB

Parameters	Value	Default	Description
utn_sec [Encrypt USB commu-	on/off	off	Enables/disables SSL/TLS encryption of all USB and UTN communication.
nication (SSL/TLS)]			The encryption strength is defined via the encryption protocol and level $\Rightarrow$ $\blacksquare$ 69.
utn_hide [Hide port key pro- tected USB ports]	on/off	off	Disables/enables the display of USB devices in the selection list of the UTN Manager. Applies to USB devices protected by the "Port Key Control" security mechanism.
utn_hid [Disable input devices (HID class)]	on/off	on	Enables/disables the blocking of input devices (HID – human interface devices). on = no blocking off = blocking
utn_tag_1 ~ utn_tag_20 [Port name]	max. 32 characters [a-z, A-Z, 0-9]	[blank]	Freely definable name of the USB port.
utn_ppwr_1 ~ utn_ppwr_20	on/off	on	Disables/enables the power supply for the USB port (i.e. the USB device connected to the port).



Table 8.3-20: Parameter list – USB device access control



## Important:

Some parameters can be assigned to a USB port twice, e.g. two USB port keys per USB port.

These parameters are assigned to the USB ports as follows:

USB port 01 = Parameter number '\_01' and '\_21'.

USB port 02 = Parameter number '\_02' and '\_22'.

•••

USB port 10 = Parameter number '\_10' and '\_30'.

USB port  $11 = Parameter number '_11' and '_31'.$ 

•••

USB port 19 = Parameter number '\_19' and '\_39'.

USB port  $20 = Parameter number '_20' and '_40'$ .

Parameters	Value	Default	Description
utn_dscr_1 ~ utn_dscr_20 [Descripton]	max. 128 charac- ters [a–z, A–Z, 0–9]	[blank]	Allows a description of the USB port. The written information is displayed on the properties page of the SEH UTN manager for the corresponding USB port.  (A line break can be created with >.)
utn_accctrt_1 ~ utn_accctrt_20 [Method]	ids key keyids		Defines the method(s) for limiting the access and use of the USB port and the connected USB device =no protection ids =device assignment key =port key control keyids=device assignment and port key control
utn_pkkey_1 ~ utn_pkkey_40 [Key]	max. 64 characters [a-z, A-Z, 0-9]	[blank]	Defines the key for the USB port and the connected USB device when port key control is used.
utn_pkvalid_1 ~ utn_pkvalid_40 [Validity]	off ever week date	off	Defines the validity of a port key. Validity allows you to specify when users can use a USB port and the USB device connected to it.  off = off ever = always (permanently valid) date = expires on week = weekly

Parameters	Value	Default	Description
utn_pkalive_40 ~ utn_pkalive_40 [Validity]	sMtWTFS:hh:hh:JJ: MM:DD:HH [max. 64 characters]	sMtWTFS:00: 23:19:12:31:2 3	Defines the validity of a port key. Validity allows you to specify when users can use a USB port and the USB device connected to it.  sMtWTFS:hh:hh:JJ:MM:DD:HH =  Days (for weekly) : hour (for weekly) : hour (for weekly) : year (for expires on) : month (for expires on) : day (for expires on) : hour (for expires on) s= valid on Sunday  M= valid on Monday  t= valid on Tuesday  W= valid on Wednesday  T= valid on Thursday  F= valid on Friday  S= valid on Saturday  To exclude a day, the letter of the day must be replaced by an underscore (_).
utn_vendprodIDs_1 ~ utn_vendprodIDs_40 [USB device]	max. 161 characters	[blank]	Defines the VID (Vendor ID) and PID (Product ID) of the USB device that is assigned to the USB port via the device assignment.  Often VID and PID of a USB device are unknown. We recommend configuration via the INU Control Center because VID and PID will be automatically determined and entered with this method.

Table 8.3-21: Parameter list – Backup

Parameters	Value	Default	Description
wdav_bupdir [Server directory]	max. 128 characters	[blank]	Defines the directory on the WebDAV server where system backups are stored.
wdav_bupmdir [Create individual directories for days]	on/off	on	Enables/disables the creation of subdirectories to store system backups for a single day.  Important: The FIFO principle (first-in, first-out) is applied after one year. For example, 1 January of last year will overwritten with files from 1 January of the current year.
wdav_bupauto [Change backup]	on/off	off	Enables/disables saving a system backup to a WebDAV server as soon as the device configuration has been changed.

Parameters	Value	Default	Description
wdav_bupday [Daily backup at]	on/off	off	Enables/disables saving a daily system backup to the WebDAV server.
wdav_buph [Daily backup at]	0-23	0	Defines the time at which the daily system backup is stored on the WebDAV server.
autoSync [Parameter backup]	on/off	on	Enables/disables saving a system backup on the SD card as soon as the device configuration has been changed.

Table 8.3-22: Parameter list – Miscellaneous

Parameters	Value	Default	Description		
utn_heartbeat	1-1800	180	WARNING		
	[1–4 characters; 0– 9]		This parameter can only be used after consultation with the SEH support team.		
utn_poffdura_1	0-100	0	WARNING		
~	[1–3 characters; 0–		This parameter can only be used		
utn_poffdura_20	9]		after consultation with the SEH		
			support team.		
utn_prereset_1	on/off	off	WARNING		
~			This parameter can only be used		
utn_prereset_20			after consultation with the SEH support team.		
dailyrestart	0-23	24	Defines the time (full hour) at which a restart is		
			performed. The default value "24" disables the function.		
snmprestart	0-23	24	Defines the time (full hour) at which the SNMP services are restarted. The default value "24" disables the function.		

INU User Manual Windows Appendix

## 8.4 SEH UTN Manager – Feature Overview

Which features are inactive (grayed out) in the SEH UTN Manager depends on different factors:

- · Selection list mode
  - global
  - user
- Client operating system (Windows, macOS, Linux)
- Client user account
  - administrator
  - standard user
- Write access to the \*.ini file (selection list)



The administrator can use these factors to provide users with individual functions.

The following table gives an overview. It shows the features that are basically available. In addition, individual features will not be displayed or will be displayed as inactive because

- the INU server model does not support them
- the USB device connected does not support them
- · security measures have been implemented

Table 8.4-23:SEH UTN Manager – Feature Overview Windows

	Global selection list		·	User selection list		
	Administr ator	User	Administr ator	User (read/ write *.ini)	User (no read/ write *.ini)	
Menu						
Selection List – Edit	$\checkmark$	×	$\checkmark$	✓	×	
Selection List – Export	$\checkmark$	×	✓	×	×	
Selection List – Refresh	$\checkmark$	$\checkmark$	$\checkmark$	✓	$\checkmark$	
UTN Server – Configure	✓	$\checkmark$	$\checkmark$	✓	$\checkmark$	
UTN Server – Set IP Address	$\checkmark$	$\checkmark$	$\checkmark$	✓	$\checkmark$	
UTN Server – Activate Auto-Connect	$\checkmark$	×	$\checkmark$	×	×	
UTN Server – Set User Port Keys	$\checkmark$	×	✓	✓	×	
UTN Server – Set Auto-Connect Port Keys	$\checkmark$	×	✓	$\checkmark$	×	
UTN Server – Add	$\checkmark$	×	$\checkmark$	✓	×	
UTN Server – Remove	$\checkmark$	×	$\checkmark$	$\checkmark$	×	
UTN Server – Refresh	$\checkmark$	$\checkmark$	✓	✓	✓	
Port – Activate	$\checkmark$	$\checkmark$	✓	✓	$\checkmark$	
Port – Deactivate	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	
Port – Request	$\checkmark$	$\checkmark$	✓	$\checkmark$	$\checkmark$	
Port – Remove	$\checkmark$	×	$\checkmark$	x	×	

	Global selection list		User selection list		
	Administr ator	User	Administr ator	User (read/ write *.ini)	User (no read/ write *.ini)
Port – Create UTN Action	✓	$\checkmark$	$\checkmark$	✓	$\checkmark$
Port – Settings	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	✓
Buttons					
Selection List – Refresh	✓	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$
Selection List – Edit	✓	×	$\checkmark$	$\checkmark$	×
Port – Activate	✓	$\checkmark$	$\checkmark$	$\checkmark$	✓
Port – Deactivate	$\checkmark$	$\checkmark$	✓	✓	✓
'Program – Options' dialog					
Network Scan – Multicast Search	$\checkmark$	×	$\checkmark$	×	×
Network Scan – IP Range Search	$\checkmark$	×	✓	×	×
Program – Program Language	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$
Program – Program Messages	$\checkmark$	×	$\checkmark$	×	×
Program – Program Update	✓	×	$\checkmark$	×	×
Automatisms – Program Start (Autostart)	✓	✓	✓	✓	✓
Automatisms – Auto-Disconnect	$\checkmark$	×	$\checkmark$	×	×
Selection List – Selection List Mode	$\checkmark$	×	$\checkmark$	×	×
Selection List – Automatic Refresh	✓	×	✓	×	×
'Port Settings' dialog					
Automatic device connection – Print-On-Demand	✓	×	✓	×	×
Plugin mode	$\checkmark$	×	$\checkmark$	×	×
Messages	$\checkmark$	$\checkmark$	$\checkmark$	$\checkmark$	✓

8.5	Index	Certification authority 75
		Cipher Suite 69
Α		Client certificate 75
	stration	Command-line interface 37
	ail 20	Complete version 14
	Control Center 11	Compound USB device 25, 100
	note access 20	Configuration backup 92
	I UTN Manager 13	Connection
	strator 72	encryption 71
	tication 80	INU Control Center 71
	onnect 29	myUTN Control Center 71
	isconnect 30	Contact 7
Automa	atic connection 29	Contact person 56
Automa		
	rt-On-Demand 30	D
Automa		Default certificate 75
	o-Connect 29	Default name 100
	o-Disconnect 30	Description 56
UII	N Action 30, 31	Device
В		contact person 56
Backup	92	description 56
BadUSE		name 56, 100
Bonjou		number 100
Brochu		time 57
Browse		Device number 100
Button		Device time 57
	93 art 98	DHCP (Dynamic Host Configuration Protocol) 43, 49
1030	art 50	Documentation
C		further applicable documents 5
CA (cer	tification authority) 75	mark-ups 6
CA cert	ificate 75	symbols 6
Certifica	ate 75	Dokumentation 5
CA	75	Downloads 7
clie	nt 75	E
	ate 76	EAP (Extensible Authentication Protocol) 80
	ault 75	FAST (Flexible Authentication via Secure Tunne-
	ete 79	ling) 82
	nagement 75	MD5 (Message Digest #5) 80
	uest 77	PEAP (Protected Extensible Authentication Proto-
	uested 75 IIME 75	col) 81
		TLS (Transport Layer Security) 80
	-signed 75 v 76	TTLS (Tunneled Transport Layer Security) 81
certifica		Email 60
	S#12 75	Administration 20
	····	event 60

notifications 60	encrypted connection 71
POP3 50	IP address
SMTP 50	dynamic 43
status 60	IPv4 43
Encrypted UTN port 90	IPv6 46
Encryption	static 43, 49
cipher suite 69	IP ports 74
email 69	IPv6 46
HTTP 69	
level 69	L
POP3 69	Liability 8
protocol 69	Licenses 5
SMTP 69	Login 72
SSL/TLS 90	Login screen 72
strength 69	
USB connection 69	M
web access 69	MAC address 100
encryption 90	Maintenance 91
Ethernet address 100	Markups 6
Event notification 60	Minimal version 14
F	Monitoring 73
	Multicast search 23
Factory default settings 95	myUTN Control Center
File ' <default-name_parameter.txt>' 92</default-name_parameter.txt>	encrypted connection 71
Further applicable documents 5	user accounts 72
G	<b>N</b>
Global selection list 34	N
Guarantee 8	Network list 23
durantee o	Notification service 60
Н	Notifications 60
Hardware Installation Guide 5	0
HID (Human Interface Device) 88	
blocking 88	Online help 5
Host name 56	Open source licenses 5
Hostname 110	Р
HTTP/HTTPS 71	Parameters 103
	backup 92
I	default values 95
IEEE 802.1X 80	edit 92
Improper use 8	lists 103
ini-file 34	load 93
Wwrite access 34	Password 72
Intended use 8	lost 95
INU Control Center 11, 100	Physical address 100
controls 12	PKCS#12 certificate 75

PKI (public key infrastructures) 75	Selection list 23, 34
Point-to-point connection 25	global 34
POP3 (Post Office Protocol Version 3) 50	user 34
Port blocking 74	Self-signed certificate 75
Port connection 13	Session timeout 72
activate 25	SMTP (Simple Mail Transfer Protocol) 50
deactivate 27	SNMP
Print job 30	Community 73
Print-On-Demand 30	SNMP (Simple Network Management Protocol) 73
Product information 5, 7	password 73
Protection mechanisms 68	SNMPv1 73
	SNMPv3 73
Q	trap 60 user 73
Quick Installation Guide 5	
R	SNTP (Simple Network Time Protocol) 57
Read-only user 72	Software 97
Release request 28	SSL (Secure Sockets Layer) 69, 71, 90
Remote access 20	SSL/TLS connection 69
Repairs 8	Status email 60
Requested certificate 75	Symbols 6
Reset 95	System requirements 2
button 95	Т
remote access 95	TCP access 74
reset button 95	TCP port access control 74
Restart 98	exception 74
	test mode 74
S	Test mode 74
S/MIME certificate 75	Time server 57
Safety regulations 8	Time zone 57
Script 31, 37	Timeout 72
Security level 74	TLS (Transport Layer Security) 69, 71, 90
Security mechanisms 68	Trap 60
SEH UTN Manager 13, 18, 22, 100	·
complete version 14	U
feature overview 124	Update 97
features 13, 18	USB connection
Funktionsübersicht 124	automate 29
install 15, 19 minimal version 14	automatic 29
selection list 34	automatic disconnect 30 disconnect 27
start 17, 19	encryption 25, 58, 90
versions 14	point-to-point 25
without graphical user interface 37	scenarios 31
SEH UTN Service 14	unencrypted 58

USB data transfer	unencrypted 58
encryption 90	utnm 37
USB device	commands 37
access 84, 87	return value 40
automatic connection 29	syntax 37
automatic disconnect 30	
automatisms 29	V
compound 25, 100	Version number 97
connect 22, 25	Viewing Parameters
disconnect 27	92
find 23	Virtual USB ports 25
HID (Human Interface Device) 88	VLAN (Virtual Local Area Network) 47
notifications 33	IPv4 client VLAN 48
request 28	USB ports 47
status information 33	·
user access 34	W
USB device access 84	Warnings 8
USB port 83, 89	Website 7
access 84, 87	_
activate 25	Z
automatic connection 29	Zeroconf 43
automatic disconnect 30	
connect 25	
deactivate 27	
device assignment 84	
disable 89	
disconnect 27	
enable 89	
encryption 90	
key control 84, 87	
name 83	
notifications 33	
power supply 89	
status information 33	
virtual 25	
User account 72	
administrator 72	
read-only user 72	
User name 72	
User selection list 34	
UTC 57	
UTN access 74	
UTN Action 30, 31	
UTN port 58, 74	
encrypt 58	
SSL port 58	
In the second se	